

NOVA SOUTHEASTERN UNIVERSITY	OCEANOGRAPHIC CENTER
POLICY/PROCEDURE TITLE: Laboratory Safety Plan	POLICY/PROCEDURE NUMBER:

DOCUMENT HISTORY

OWNER:	Oceanographic Center	Date: 18 Jul 2012	
APPROVED:	NSU, EH&S Board	Date: 21Sep 2012	
IMPLEMENTED:		Date:	
RETIRED:		Date:	
<u>Date:</u>	<u>Revision No.</u>	<u>Review / Changes</u>	<u>Reviewer</u>

Distribution: The current version is available via NSU intranet. Paper copies of this document require prior approval before printing

Table of Contents

Section 1:	Introduction	4
Section 2:	Management and Responsibilities.....	4
2.1	Laboratory Managers and Principal Investigators	5
2.2	Employees, Faculty and Students	6
Section 3:	General Safety Guidelines.....	7
3.1	Preparing for Laboratory Work.....	7
3.2	During Laboratory Work Hours.....	7
3.3	Cleaning up Before Leaving the Laboratory.....	8
3.4	Evaluating Laboratory Hazards	8
3.5	Labels, Material Safety Data Sheets, and Training.....	9
3.6	Postings and Signage.....	10
Section 4:	Emergencies and Spill Guidelines	10
4.1	Spill Kit Materials.....	11
4.2	General Chemical Spill Guidelines.....	11
4.3	Solvent Spills.....	12
4.4	Corrosive Spills (Acids and Bases)	12
4.5	Mercury Spills.....	12
4.6	Radioactive Material Spills	13
4.7	Spill of Biohazardous Radioactive Material.....	13
4.8	Biological Spills or Exposures	14
4.9	Ethidium Bromide Spill Clean-up and Disposal	15
4.10	Biological Safety Level1 Spill Procedure	15
4.11	Fires.....	16
4.12	Weather Alerts.....	17
4.13	Responding to Injuries and Inhalation Exposures	17
4.14	Reporting Injuries	20
Section 5:	Emergency Equipment.....	20
5.1	Safety Showers and Eyewash Stations.....	20
5.2	Fire Safety Equipment.....	22
Section 6:	Personal Protective Equipment (PPE) and Latex Allergy	23

NSU OCEANOGRAPHIC CENTER LABORATORY SAFETY PLAN

6.1	Protective Devices.....	23
6.2	Latex Allergy.....	25
Section 7: Engineering Controls.....		26
7.1	Fume Hoods.....	26
7.2	Perchloric Acid Fume Hoods.....	28
7.3	Glove Boxes.....	28
7.4	Biological Safety Cabinets.....	29
7.5	Chemical Storage Cabinets.....	30
7.6	Individual Storage Containers.....	30
Section 8: Laboratory Equipment and Procedures.....		31
8.1	Refrigerators.....	31
8.2	Incubators.....	32
8.3	Centrifuges.....	32
8.4	Autoclaves.....	33
8.5	Vacuum Systems.....	34
8.6	Compressed Gas Cylinders.....	34
8.7	Cryogenic Liquids.....	35
8.8	Electrophoresis.....	36
8.9	Ultraviolet Light.....	36
8.10	Glassware.....	38
Section 9: Oceanographic Center Laboratory-Specific Safety Plan and Procedures.....		39
9.1	Conservation Biology Laboratory.....	39
9.2	Coral Histology Laboratory.....	40
9.3	Deep-Sea Biology Laboratory.....	42
9.4	Electron Microscopy Laboratory.....	44
9.5	Coral Hybridization Laboratory.....	46
9.6	Invertebrate Laboratory.....	48
9.7	Fisheries Laboratory.....	50
9.8	Physical Oceanography Laboratory.....	52
9.9	Molecular Microbiology Laboratory.....	53
9.10	Systems Biology and Geology Laboratory.....	55
9.11	Sclerochronology Laboratory.....	57
9.12	Ichthyology Laboratory.....	58

9.13	Plankton/Stable Isotope Laboratory	60
9.14	Chemistry Preparation Laboratory	62
9.15	Amphipod Laboratory.....	64
9.16	Coral Computer Analysis and GIS Laboratory and Student Computer Laboratories .	66
9.17	Compressed Gas Cylinders for Scuba Diving and Scuba Fill Station.....	67
9.18	Communal Seawater and Coral Restoration Laboratories.....	71
9.19	USGS Laboratory.....	73
Section 10: Emergency Information		73
Section 11: Laboratory Self-Inspection Checklist		77

Section 1: Introduction

Nova Southeastern University (NSU) is committed to insuring all safety practices are utilized in laboratories and that all facilities are safe for the NSU Community. Maintaining compliance with federal, state, local laws, and regulations pertaining to laboratory safety and hazardous materials management is essential to this commitment. The Environmental Health and Safety Office (EH&S) has overall responsibility for providing information and training concerning health and safety to faculty, staff and students. Implementing safety and assuring all individuals concerned are informed and have a safe laboratory to conduct activities are the responsibility of individual colleges, departments, and/or centers. Colleges, departments, centers, or other units may develop internal policies and procedures for laboratory safety, but they must be at least as stringent as University guidelines and are subject to review by EH&S.

The Safety Officer at EH&S is responsible for developing, maintaining and monitoring University safety policies and guidelines related to conducting research, teaching, and clinical activities. In addition, the Safety Officer is responsible for designing and overseeing the training programs for University personnel regarding regulatory requirements for safely conducting activities in NSU laboratories. Colleges, departments, or other units are responsible for maintaining accurate records related to departmental student training and incident/accident investigation consistent with University safety plans and policies. Records of training performed by EH&S will be retained by EH&S for at least 30 years.

This laboratory manual is an internal document of Nova Southeastern University’s Oceanographic Center, and is an abridged version of the EH&S Laboratory Safety Plan. This document provides laboratory specific information that is supplemental to the full EH&S Laboratory Safety Plan, the EH&S Chemical Safety Plan, and the EH&S Biological Safety Plan.

Section 2: Management and Responsibilities

The Laboratory Safety Plan may differ from laboratory to laboratory depending on the size and the areas/departments of analytical testing and research, but ultimately the goals for implementation of the safety plan will be the same and should cover the following:

- Reduce the risk of chemical and biological exposure.

NSU OCEANOGRAPHIC CENTER LABORATORY SAFETY PLAN

- Reduce the risk of work-related injury and illness.
- Minimize the risk to the environment.
- The compliance with applicable federal, state, county, and city regulations and standards.

The Laboratory Safety Plan can be divided into four parts that represents the acronym – SAFE.

- S - Selection of equipment and supplies to maximize safety
- A - Annual mandatory employee education
- F - Formal documented inspections
- E - Evaluation of safety documentation on a monthly basis.

The Laboratory Safety Plan should include the following policy objectives:

- Prevention – will emphasize strategies to prevent any occurrence that would have an adverse effect on all personnel, contractors and visitors.
- Surveillance – will provide systematic inspection of facilities; collection, analysis, interpretation, and evaluation of safety and health data essential to the planning and implementation of the safety program with a timely dissemination of this data.
- Protection and Control – will be maintained and include engineering controls; the use of less hazardous alternatives; the use of PPE's and administrative procedures.
- Emergency Preparedness and Response – will seek to identify circumstances requiring advanced preparation and immediate action; develop and maintain contingency plans and procedures to address these circumstances; provide and communicate plans of action for response to fire, medical, first aid, chemical, violence, biohazard, adverse weather, and other incidents that may require advanced preparation and timely response.
- Education, Promotion, and Training – health, safety and chemical awareness will be promoted among all employees, visitors, contractors, and community members through orientation programs, regular education and training sessions.

Laboratory management and EH&S have a duty to assure that laboratory personnel work in a safe and healthy environment with a minimum burden on laboratory activities. EH&S should provide and promote a safe workplace that will foster a positive health and safety attitude in all personnel including visitors and contractors. Safety knowledge is the responsibility of all personnel and a good relationship between management and employees is essential for an effective safety, health and environmental program. Specific responsibilities for the Environmental Health and Safety Office, Physical Plant, and Utilities are detailed in the EH&S Laboratory Safety Plan and the EH&S Biological Safety Plan. Specific responsibilities for laboratory supervisors, principal investigators, and employees, staff and students are set forth below.

2.1 Laboratory Managers and Principal Investigators

- a. Design and conduct laboratory processes and operations to assure that employee exposure to risk conforms to procedures and objectives contained in this plan and those contained in any supplemental information developed in the college in response to specific clinical activities or areas of research.
- b. Monitor the procurement, safe use, and proper disposal of chemicals.

NSU OCEANOGRAPHIC CENTER LABORATORY SAFETY PLAN

- c. Write Standard Operating Procedures and other information relevant to lab processes in their specific areas as needed to supplement those contained in this plan.
- d. Instruct employees on the contents of this plan, and any supplements, and the location of the plan and related materials within the workplace.
- e. Take all reasonable precautions to protect the safety and health of laboratory workers and the environment.
- f. Schedule services via Center administration or main campus relevant administration for hazardous waste disposal and oversee the handling of hazardous waste pending proper disposal.
- g. Conduct regular laboratory safety self evaluations.
- h. Complete and update annual laboratory chemical inventories in accord with the instructions and schedule provided by the Environmental Health and Safety office.
- i. Inform employees of the permissible exposure limits for the hazardous chemicals listed on inventories and the signs and symptoms associated with exposures to these chemicals.
- j. Provide site specific training on laboratory hazards as described in The University's Hazard Communication Program.
- k. Determine the required levels of personal protective equipment, fire extinguishers, fume hoods, flammable liquid storage cabinets, biological safety cabinets, eye washes, safety showers, and spill cleanup kits. Assure that all required equipment is available and in working order and that appropriate training for each item has been provided.
- l. Have readily available a current copy of a Material Safety Data Sheet for all hazardous chemicals in the laboratory.
- m. Post emergency telephone numbers on the outside of the laboratory door and by all telephones in the area.
- n. Report to the EH&S office if there is reason to believe that exposure levels for a hazardous chemical exceed the action level or the permissible exposure limits and document the incident.
- o. Forward documentation on laboratory accidents and exposures to the EH&S office.
- p. Provide for the safety of visitors.

2.2 Employees, Faculty and Students

- a. Maintain a thorough understanding of and follow the laboratory policies, and procedures in this plan and those contained in any supplemental information developed in the college in response to specific clinical activities or areas of research.
- b. Use and maintain personal protective equipment (i.e. lab coats, chemical splash goggles, face shields, respiratory protection, and gloves) as mandated in this plan for laboratories.
- c. Use flammable liquid storage cabinets, acid storage cabinets, biological safety cabinets, fume hoods, and other laboratory safety equipment provided.
- d. Inform supervisor immediately of any laboratory safety equipment that is needed but not available or that is not in good working order.
- e. Inform supervisor immediately of exposure symptoms, accidents, or chemical releases and document incident.
- f. Attend Hazard Communication Act and all other applicable training sessions.

Section 3: General Safety Guidelines

Laboratories are workplaces with the potential to expose employees, faculty, and students to many kinds of hazards and risks, possibly more so than anywhere else in the business workplace. Therefore, a risk plan is necessary to help identify, control, or reduce the hazards, protect employees, faculty and students and reduce operational costs. Good laboratory practices should be introduced and will be achieved if employees, faculty and students follow the basic guidelines.

3.1 Preparing for Laboratory Work

Before starting to work in a laboratory, familiarize yourself with the following:

- Job Safety Analysis (JSA) indicating the hazards of the materials in the laboratory, as well as appropriate safe handling, storage and emergency protocols.
- Labels and material safety data sheets (MSDS's) before moving, handling or opening chemicals. Never use a product from an unlabeled container, and report missing labels to your supervisor.
- The agents, processes, and equipment in the laboratory. If you are unsure of any aspect of a procedure, check with your supervisor before proceeding.
- The location and operation of safety and emergency equipment such as fire extinguishers, eyewash and shower, first aid and spill response kits, fire alarm pull stations, telephone, emergency numbers, and emergency exits.
- Emergency spill response procedure for the material you will handle.
- Emergency reporting procedures and telephone numbers.
- Designated and alternate escape routes.
- Any employee, faculty, or student who has a disability and the precautions necessary.

3.2 During Laboratory Work Hours

- Restrict laboratory access to authorized persons only.
- **Eating, drinking, smoking** and applying cosmetics and handling of contact lenses are prohibited in a laboratory. Do not store food in a refrigerator used for research or clinical purposes.
- Wear labs coats (knee length) and safety glasses in laboratories as applicable. Open shoes, such as sandals, should never be worn in the lab.
- Tie back or otherwise restrain long hair when working with chemicals, biohazards, radioisotopes, or moving machinery.
- Keep work places clean and free of unwanted chemicals, biological specimens, radioactive material and idle equipment. Avoid leaving reagent bottles empty or full, on the floor.
- Work only with materials that you know their flammability, reactivity, toxicity, safe handling, and storage and emergency procedures.
- Never pipette by mouth, use mechanical transfer devices.
- **Walk, do not run in the lab** particularly if carrying any hazardous material.
- **Know the evacuation** procedures for the work area.
- **Do not use** hallways as storage areas.
- Keep exits and passageways clear at all times.

- Ensure that access to emergency equipment (eyewashes, safety shower, and fire extinguishers) and controls are not blocked.
- Working alone is an unsafe practice at any time. However, if the nature of the work makes it unavoidable, take measures to ensure that others are aware of your location and have someone check in with you from time to time, either in person or by telephone.
- Any work conducted outside normal working hours requires necessary approval. Security must also be notified.
- Report accidents and dangerous incidents (“near-misses”) promptly to your supervisor and the safety officer. Complete the prescribed form.
- Wash your hands thoroughly before leaving the laboratory.
- Any procedures involving the release of volatile toxic or flammable materials should be conducted in a chemical fume hood.
- Perform procedures that release infectious bio-aerosols in a biological safety cabinet
- Handle all human blood and body fluids as if potentially infectious. Universal Rule.

3.3 Cleaning up Before Leaving the Laboratory

Perform a safety check at the end of each procedure and before leaving the labs. Make sure to:

- Turn off gas, water, electricity, vacuum, and compression lines and any heating apparatus.
- Return unused materials, equipment and apparatus to their proper storage locations.
- Label, package and dispose of all waste material properly and promptly.
- Remove defective or damaged equipment immediately, and arrange to have it repaired or replaced.
- Decontaminate any equipment or work areas that may have been in contact with hazardous materials.
- Leave behind protective clothing (lab coats, gloves, etc.) when leaving the laboratory.
- Close and lock the door to the laboratory if you are the last one to leave.

3.4 Evaluating Laboratory Hazards

There are many categories of hazards that might be encountered in a laboratory setting, and the situation can change frequently. Even after current risks have been identified and controlled, it is critical to understand that new and unexpected dangers can arise. Regular inspections shall be conducted on the following items as applicable for a particular laboratory:

- Fire extinguishers (Safety Officer)
- Emergency eyewashes and showers. Run these for several minutes weekly (Quarterly checks by Safety Officer)
- First aid kit. Contents must relevant to the risk of the laboratory.
- Spill kit.
- Fume hood and other ventilation devices. Annual certification required.
- Any tubing / piping for circulating water, vacuum, gases
- Chemical storage compartments. Ensure compatibility.
- Ensure that fire extinguishers and emergency showers are inspected, tested recorded.

Remain alert for the following potential laboratory hazards:

- Chemicals
 - Flammable
 - Toxic
 - Oxidizing
 - Reactive
 - Corrosive
- Microbiological disease-producing agents and their toxins
 - Viruses
 - Bacteria
 - Parasites
 - Rickettsiae
 - Fungi
- Physical or mechanical hazards
 - Ionizing and non-ionizing radiation
 - Electrical and other energy sources
 - Poor equipment design or work organization (ergonomic hazards)
 - Tripping hazards
 - Excessive noise or heat
- Psychosocial conditions that can cause psychological stress.

3.5 Labels, Material Safety Data Sheets, and Training

Labels or hazardous material information are essential as they alert people to the dangers of the product and the basic safety precautions. All individuals are to ensure that all labels are intact on the containers and comply with labeling protocols. Replace and re-label as necessary.

Material Safety Data Sheet's provide more safety and hazardous details of the product than the labels. Technical bulletins provide chemical, physical, and toxicological information about each controlled product, as well as information on precautionary and emergency producers. This information must be readily accessible to anyone who work with, or who may otherwise be exposed to, controlled products. A hard copy of all chemicals used in the laboratory should be in an easy accessible area. (See Chemical Hygiene Plan)

Hazard-specific or job-specific training refers to instruction in the procedures for the safe handling and storage of the controlled products that are unique to each laboratory. Hazard-specific training also covers spill or leak remediation, waste disposal, and basic first aid instructions which are critical to the proper functioning of any lab. Topics to be covered in safety training are:

- a. *Emergency information*
- b. *Fire safety devices*
- c. *Emergency devices*
- d. *Personal protective equipment (PPE)*
- e. *Chemical fume hoods, biological safety cabinets, and laminar flow hoods (clean benches).*
- f. *Material Safety Data Sheets (MSDSs)*
- g. *Chemical labels, hazard warning signs, and Designated Areas*

- h. *Chemical categories and properties*
- i. *Biomedical, radioactive, and chemical waste disposal*
- j. *Hazard Communication Policy*
- k. *Infection Control Programs*

Federal Law (OSHA's Hazard Communication Standard) mandates that the above listed training information be reviewed whenever the employee is reassigned to a new task or if a new hazard is introduced in the workplace.

3.6 Postings and Signage

The main entrance to each laboratory in which chemical, biological or radiological materials are used or stored must be posted with the following:

- Names and phone numbers of the lab supervisor and other responsible parties to be contacted in the event of a fire, accident or spill.
- Special hazards that may be encountered in the laboratory (e.g. laser in use, cylinders, biohazardous material, radioactive material, etc.)
- Safety instructions for persons entering the laboratory such as: required protective equipment, access restrictions, etc.
- Prohibitions (e.g., No Food or Drink Allowed).
- National Fire Protection Association (NFPA) 704 diamond (supplied by EH&S upon request once chemical inventory is submitted).

The interior of the laboratory must be posted with the following:

- Emergency Action Plans near the exit. Refer to the next section for development assistance.
- Hazardous Waste Accumulation Area sign marking location where unwanted laboratory materials will be accumulated for collection by EH&S.
- Signs identifying location of safety equipment (e.g., fire extinguisher, safety shower, eyewash fountain, etc.).
- Signs, labels and/or warning/caution tape identifying designated use and storage areas for materials or equipment requiring special procedures.

All required signage and postings are available from EH&S upon request.

Section 4: Emergencies and Spill Guidelines

During normal operations in the laboratory, accidents will occur despite our best efforts to prevent them. Spills can be from different sources but require immediate attention by an employee knowledgeable about the spill clean-up procedure, which kit to use and the emergency response if necessary. All spills are to be reported and investigated. If a situation arises that employees have to evacuate due to a hazardous spill, employees must know how to act and react during an emergency by following the emergency procedure using the acronym NEAR; **N**otify, **E**vacuate, **A**ssemble, **R**eport. A spill clean-up guide must be posted for quick reference. See Appendix A for an example of a quick reference on spill clean-up.

4.1 Spill Kit Materials

Laboratories should be prepared for chemical spills by having a spill kit or other materials available for spill clean-up and supervisory personnel trained to respond. The spill kit must be in an obvious location and all persons responsible for the activities conducted in the laboratory must be knowledgeable in the use of the spill kit. Spill kits can be specialized for individual laboratories or can contain general supplies necessary to handle a variety of spills. Spill kits are commercially available or you may request a listing from the EH&S office on what items must be included in a spill kit. Departments and laboratories are responsible for purchasing and refurbishing spill kit items.

4.2 General Chemical Spill Guidelines

Determine the extent and type of spill. Contact EH&S if any of the following applies:

- Large spill category
- Release to the environment
- Acutely hazardous chemical spill
- No one trained in the proper procedures for cleaning chemical spills

Chemical Spill Categories

Category	Quantity	Response	Treatment Materials
Small	Spilled material: <300 milliliters	Chemical Treatment	Neutralization or Absorption Spill Kit
Medium	Spilled material: > 300 ml and < 5 Liters	Absorption	Absorption Spill Kit
Large	Spilled material: >5 Liters	Call EH&S office	

Types of Chemical Spills

Type of Spill	Neutralizing Agent / Clean up supplies
Acid	Sodium bicarbonate
Bases	Citric Acid
Organic Solvents	Absorbent pads, charcoal if available
Mercury	Amalgam sponges
Metals e.g., sodium	Sand, Class D fire extinguishers

Clean-up Procedure:

1. Immediately alert area occupants and supervisor, and evacuate the area, if necessary.
2. Contact 911 in the event of a large spill, fire, or when medical attention is required. Refer to the posted signs for location information.
3. Attend to any people who may be contaminated. Contaminated clothing must be removed immediately and the skin flushed with water for at least fifteen minutes. Clothing must be laundered separate from other clothing before reuse.
4. Immediately warn everyone when a volatile flammable material is spilled. Control sources of ignition. Ventilate the area by turning on the fume hoods with the sashes completely open and open all windows.
5. Use the appropriate personal protective equipment for the hazard involved. Refer to the Material Safety Data Sheet or other available references for information.

6. The use of respiratory protection requires specialized training and medical surveillance. DO NOT enter a contaminated atmosphere without protection or use a respirator without training. Call EH&S when respiratory protection is required and there are no trained personnel available. When respiratory protection is used in an emergency situation, another trained person must be outside the spill area and have communication abilities with the trained person in the spill area.
7. Cover or block floor drains or any other route that could lead to an environmental release.
8. Use the appropriate media when cleaning spills. Begin by circling the outer edge of the spill with absorbent. Next, distribute spill control materials over the surface of the spill. This will effectively stop the liquid from spreading and minimize volatilization.
9. Place absorbed materials in an appropriate container using a brush and scoop. Small spills can be placed in polyethylene bags. Larger quantity spills may require five-gallon pails or 20-gallon drums with polyethylene liners.
10. Absorbent materials used on the chemical spill will most likely require disposal as hazardous waste. Place a completed hazardous waste label on the container. Contact EH&S for information concerning preparing waste for disposal and for a waste pick-up.
11. Clean the surface where the spill occurred using a mild detergent and water.
12. Immediately report all spills to your supervisor.

4.3 Solvent Spills

1. Apply activated charcoal to the perimeter of the spill.
2. Mix until the spill has been completely absorbed.
3. Transfer the absorbed solvent to a hazardous waste bag, tie and attach an appropriate label.
4. Contact EH&S for pick-up.
5. Clean the area with soapy water.

4.4 Corrosive Spills (Acids and Bases)

Hydrofluoric acid requires special treatment. Products are commercially available for absorbing hydrofluoric acid. Purchase of hydrofluoric acid spill and personnel exposure material (see first aid kits) is mandatory for laboratories using hydrofluoric acid. Bases can be equally as harmful as acids. Never add a strong acid to a strong base.

1. Apply the appropriate neutralizer to the perimeter of the spill.
2. Mix thoroughly until evolution of gas has stopped.
3. Check the mixture's pH with pH paper.
4. Transfer the waste to a bag, fill out the appropriate waste label & call EH&S for pick-up.
5. Clean the spill area with soapy water.

4.5 Mercury Spills

Mercury is classified as a persistent bio-accumulative toxin (PBT). Additionally some forms of organic mercury readily absorb through gloves and skin. Laboratories utilizing mercury must be prepared with an appropriate cleanup kit. Do not use sulfur to clean up mercury.

When **more than ten milliliters** of mercury has been spilled:

1. Alert others in the area.
2. Mark off the area.

3. Contact EH&S immediately.

Procedure for use with commercially available mercury clean-up sponge:

1. Dampen the sponge with water and wipe the contaminated area.
2. Perform the procedure slowly to insure complete absorption of mercury onto the sponge.
3. Place the sponge in its plastic bag, seal shut and fill out an appropriate waste label. Call EH&S for disposal. A hazardous label should be attached to the bag to identify contents.
4. Wash hands, arms and face thoroughly when finished working with mercury.

4.6 Radioactive Material Spills

Spills of quantities of radiological materials present at NSU cause little or no immediate external hazard. Of bigger concern, is the spread of contamination and the internal contamination of employees, faculty and students. Radioactive material spills must therefore be handled in a manner that prevents this. Prevent the spread of contamination by limiting the movement of persons present in the area of the spill until they have been found free of contamination. A minor radiation spill is one that can be handled safely without the assistance of the radiation safety staff. Most spills at NSU will be small spills due to the small quantities of radioisotopes that are utilized in campus laboratories. For response procedures to a large or Major radioactive spill, see the EH&S Laboratory Safety Plan.

Small/Minor Radioactive Material Spill

1. Alert persons in the immediate area.
2. Distinguish the spill area with radioactive label tape. Indicate the isotope spilled.
3. Notify the laboratory supervisor or principle investigator.
4. Wear personal protective equipment to include, safety goggles, disposable gloves, shoe covers and long sleeve lab coat. If the substance is a beta emitter a plastic lab apron may be used to provide additional body shielding.
5. Place absorbent towels over liquid spills and dampened towels over spills of solid materials.
6. Clean the spills beginning from the outside edge and moving towards the center.
7. Place the towels in a plastic bag and put in a radiation waste container.
8. Verify the area and responder hands and shoes are free from contamination by using a survey meter or by performing wipe tests. Repeat the cleaning process until there is no contamination remaining.
9. Submit a written account to the Radiation Safety Officer within 24 hours of the occurrence.

4.7 Spill of Biohazardous Radioactive Material

The procedure for spill cleanup of a radioactive biological material requires emergency procedures which protect the person from exposure to the radiochemical while disinfecting the biological material.

1. Avoid inhaling airborne material, notify other room occupants, and quickly leave the area.
2. Remove all contaminated clothing by turning exposed areas inward. Place in biohazard bag.
3. Wash all exposed skin areas with a disinfectant soap. Rinse for a minimum of 5 minutes.

4. Inform the laboratory supervisor and contact the Radiation Safety Officer
5. Post a spill sign and do not reenter the lab for at least 30 minutes.
6. Contact the radiation safety officer to confirm safe entry into the laboratory.
7. Utilize appropriate protective clothing and reenter the spill area. The use of respirators requires special training. Call EH&S if a respirator trained individual is required but not available for spill cleanup.
8. Cover the area with disinfectant soaked towels. Pour the disinfectant around the perimeter of the spill area. As the spill becomes diluted with disinfectant, increase the concentration of the disinfectant. Allow 20 minutes for disinfection. **Please note that the use of bleach on iodinated material may cause the release of radioiodine gas. An alternative such as, phenolic compounds or an iodophor should be used when radioactive iodine has been spilled.**
9. To clean splashed material, spray with disinfectant solution and wipe clean or saturate a paper towel with disinfectant solution and wipe clean.
10. Personal protective equipment (PPE) must be disinfected with bleach solution and disposed of as radioactive waste. Place the used PPE on absorbent paper. Spray the PPE with 10% bleach solution and allow a 20 minutes contact time.
11. Place all decontaminated waste materials in an approved container for radiation and label appropriately. Do not autoclave the waste unless the Radiation Safety Officer approves the procedure.
12. Wash hands and potentially exposed areas with a disinfectant.
13. Monitor laboratory occupants for contamination of radioactive materials.
14. Decontaminate under the advisement of the Radiation Safety Officer.
15. All contaminated persons must seek medical assistance after decontamination procedures have been completed.
16. Monitor the area for residual activity and handle it according to the Radiation Safety Plan guidelines.

4.8 Biological Spills or Exposures

A minor spill of a biological agent is defined as one that has occurred and is contained within the biological safety cabinet and which provides personnel protection. It is assumed that no one is contaminated by the spill. Most clinical and research activities conducted at NSU is classified as Biological Safety Level 1(BL1).

If a spill contains BL 2 agents or greater, or the spill is too dangerous or large to be safely cleaned up by laboratory personnel, EH&S must be contacted immediately. Detailed information on BL2 and BL3 biological spills are found in the EH & S Biological Safety Plan. Contact your department supervisor or EH&S for a copy of this plan.

A. Biological Spill Kit

Laboratories utilizing biological materials must be prepared with a biological spill kit. Biological spill kits can be assembled to fit specific laboratory needs although basic kits must contain the following items:

- Concentrated household bleach
- A spray bottle for bleach solutions
- Face protection

- Utility gloves and nitrile gloves
- Paper towels or other sorbent
- Biohazard bags
- Forceps for handling sharps
- Biohazard symbol labels (for use on the bucket when the cleanup is complete)

B. Biological (Blood and Body Fluid) Spill Procedures

Blood and body fluid spills with low concentrations of infectious microorganisms must be handled in the following manner:

1. Wear at least the minimal required laboratory personal protective equipment.
2. Absorb fluid with paper towels and place in a biohazard bag.
3. Collect any broken glass with forceps and place in an appropriate broken glass collection container.
4. Clean the area with a detergent.
5. Spray the area with a 10% bleach solution and allow to air dry for 15 minutes.
6. Wipe the area with disinfectant soaked paper towels.
7. Place all contaminated items in a biohazard bag, autoclave, and dispose of according to NSU guidelines.

4.9 Ethidium Bromide Spill Clean-up and Disposal

Ethidium bromide is a potent tumorigen. When handling ethidium bromide it is imperative that no skin contact occurs and thorough hand-washing is performed after handling. For a small spill:

1. Absorb freestanding liquid with a compatible absorbent material.
2. Use ultraviolet light to locate the location of the spill material.
3. Prepare decontamination solution by mixing 4.2 grams of sodium nitrite and 20 mL of hypophosphorous acid (50%) in 300 mL of water.
4. Wash the spill area with a paper towel soaked in the decontamination solution. Wash the spill area five more times with paper towels that have been soaked in the decontamination solution (using fresh paper towels each time).
5. After cleaning the area put all the used towels in the decontamination solution for 1 hour.
6. Check the completeness of decontamination using an ultraviolet light.
7. When the decontamination procedure is complete, transfer all the decontamination solution to an appropriately labeled waste container. Call the EH&S office for waste pick-up.

To Clean Contaminated Equipment:

Laboratory equipment (e.g. transilluminators, laboratory floors and countertops, etc.) contaminated with aqueous solutions of more than 10 mg/L (0.01 %) EtBr should be decontaminated using the spill clean-up procedures listed above.

4.10 Biological Safety Level 1 Spill Procedure

Biosafety Level 1 is the classification that applies to agents that are not known to cause disease in healthy adults.

1. Notify other laboratory occupants.

2. Remove contaminated clothing. If necessary use the safety shower or emergency eyewash. Wash affected area with a disinfectant.
3. Wear at least the required laboratory personal protective equipment.
4. Cover the spill with paper towels. Pour disinfectant around the outside of the spill area and then add disinfectant over the spill area until the spill area has been completely covered. Allow the disinfectant at least 15 minutes to work. To clean splashed material spray with disinfectant solution and wipe clean or saturate a paper towel with disinfectant solution and wipe clean.
5. Pick up any pieces of broken glass with forceps and discard in a broken glass container.
6. All clean up materials must be placed in a biohazard bag, autoclaved and appropriately disposed.
7. Wash hands thoroughly with soap and a handwashing disinfectant.

4.11 Fires

All employees at the time of hire and all students must be informed at the beginning of each semester of building evacuation routes. It is the laboratory supervisor's responsibility to provide this information. In the event of a fire, immediate evacuation is essential. On the way out of the building remember these safety precautions:

- Never enter a room containing a fire.
- Never enter a room that is smoke filled.
- Never enter a room in which the top half of the door is hot to the touch.

A. Small Fires

1. Pull the fire alarm and call the Public Safety Office at 2-8999 or 911.
2. Alert people in the area to evacuate. Assist those individuals with disabilities.
3. Turn off gas main.
4. If you have been trained to use a fire extinguisher, do so while maintaining a clear exit path behind you.
5. Operate the extinguisher using the P-A-S-S method:

P – **Pull the pin** located on the extinguishers handle.

A – **Aim** the nozzle at the base of the fire.

S – **Squeeze** or press the handles together.

S – **Sweep** from side to side at the base of the fire until it is out.

B. Large Fires

1. Pull the fire alarm, when in a safe area; call 911.
2. Alert people in the area to evacuate. Assist those individuals with disabilities.
3. Turn off gas mains, only if time permits.
4. Close the doors to confine the fire.
5. Move to a designated assembly area away from and upwind from the building.
6. Persons having knowledge about the incident and location must provide this information to emergency response personnel.

4.12 Weather Alerts

When a severe weather siren is identified, immediately request all persons in the laboratory to turn off any gases, hotplates, and pressure reactive experiments. Immediately leave the area in an orderly manner. Use the innermost stairway and take cover in the lowest most internal compartment of the building.

4.13 Responding to Injuries and Inhalation Exposures

The first line of defense to avoid injuries and inhalation exposure for any person working or performing clinical or research procedures in a laboratory is knowledge. Always be aware of what you and others in the surrounding area are working with and the associated hazards. This information is available on the product material safety data sheet (MSDS). MSDS must be available for review by faculty, staff, researchers and students prior to utilizing any new chemical product or procedure involving the chemical product at all times.

Following an injury the person in charge of the laboratory at the time of occurrence must complete an incident report form (see Appendix B). The incident report form serves as a guideline for appropriate information communication to the injured person and as a notification to the Safety Committee. The information will be used to better prepare the University faculty and staff in the prevention and response of accidents and injuries.

A. Inhalation of a Biological Material

1. Immediately notify all other persons in the laboratory, hold your breath, and evacuate.
2. Remove all personal protective equipment by turning it inwards to decrease the spread of contamination.
3. Wash hands and any other potentially exposed area with soap and water for a minimum of 15 minutes.
4. Post a spill sign and do not reenter the lab for at least 30 minutes.
5. Notify the Biosafety Officer and call 911.
6. Immediately seek medical assistance.

B. Needle Sticks and Puncture Wounds

1. Wash well with disinfectant or antiseptic soap (preferably a type with iodine) and water for 15 minutes.
2. Squeeze around affected area to encourage bleeding.
3. Notify the laboratory supervisor.
4. Seek medical assistance immediately.

When a needle stick wound has the potential for BL3 exposure, the following steps are to be followed:

1. Wash the affected area with disinfectant, antiseptic soap and warm water for 15 minutes.
2. Squeeze around the area to encourage flow of blood out of the wound.
3. Notify the laboratory supervisor.
4. Immediately seek medical attention.

C. Chemical Injury or Exposure Response

1. Protect yourself from exposure and stabilize the injured person. When possible wash your hands prior to and after giving first aid. Use gloves whenever possible.
2. Call 911 when emergency medical attention is required or when not sure how to respond.
3. Utilize the safety shower available in the laboratory when appropriate. Clothing must be removed to prevent prolonged chemical contact with the skin. Rinse the exposed area for at least 15 minutes.
4. Use the emergency eyewash stations to rinse harmful chemicals from the eyes when appropriate. Eyes must be rinsed for a minimum of 15 minutes.
5. Offer the injured person medical attention. Contact 911 immediately if he or she desires medical attention by an emergency room physician. Contact a family member to transport the injured person during non-emergency situations.
6. Contact EH&S to report all injuries and complete an accident report. An accident report must be completed within 24 hours of the incident.
7. Report all accidents involving injuries to EH&S within 24 hours of the incident. EH&S will contact the Safety Committee chairperson. The laboratory chairperson will contact the departmental chairperson and follow-up on the status of the person's injury.

D. Cuts and Scratches

In treating small cuts and scratches, clean the area with soap and water and apply a clean dressing over the wounded area. If there is significant bleeding, take the following steps:

1. Immediately call 911.
2. Reassure the injured person.
3. Lay the injured person down.
4. **Do not** remove any objects that may have impaled the person.
5. Place direct pressure on the wound with a clean cloth or sterile bandage. Do not apply a tourniquet.
6. If the pressure does not slow the bleeding, elevate the wound above the heart.
7. If the bleeding is severe, elevate the person's legs approximately 12 inches.

E. Thermal Burns

First degree burns are characterized by pain, redness and swelling.

1. Run cool water over the burn or soak it for a minimum of 10 to 15 minutes.
2. Cover the burn with a sterile bandage or clean cloth.
3. Do not apply any ointments, salves, or sprays.

Second and third degree burns are characterized by red mottled skin and blisters. White or charred skin is indicative of a third degree burn.

1. Call 911.
2. Do not remove any burnt clothing.
3. Cover the burns with dry sterile or clean bandages.
4. Do not apply ointments, salves, or sprays.

F. Chemical Burns

When necessary, use the eyewash or safety shower as instructed in the procedures below. Insure your own safety by wearing the appropriate personal protective equipment.

1. Chemical Burns to the Skin

- Remove the victim's clothes, including his/her shoes.
- Rinse the area for a minimum of 15 minutes.
- Do not apply burn ointments to injured areas.
- Call 911, when the burn is large.

2. Chemical Burns to the Eyes

- Forcibly open the eyelids to insure the all the chemical is removed.
- Wash from the nose to the ear to insure the chemical does not wash back into the eye.
- The wash must continue for a minimum of 15 minutes.
- Cover the injured person's eyes with clean or sterile gauze.
- Call 911.

3. Hydrofluoric Acid Burns

NSU requires supervisors having responsibility for laboratories that use or store Hydrofluoric acid (HF) to maintain a commercially prepared gel of calcium gluconate in the laboratory area. The gel is used for immediate treatment of skin exposures to HF. HF causes serious damage to tissues and bones. The faster the treatment, the smaller the chance of serious injury. In the event of a burn caused from HF, the following steps must be immediately taken:

- The skin must be copiously washed, beginning immediately after exposure.
- Apply a bulky dressing soaked in a commercially prepared quaternary ammonia compound, calcium gluconate or magnesium oxide topical ointment. Always follow the manufacturer's directions supplied with the HF burn ointment/solution if they differ from these.
- Seek immediate medical attention.

G. Chemical Ingestion or Inhalation

1. Ingestion of Chemicals

- Immediately call 911.
- Refer to the MSDS to effectively treat the injured person.
- If the injured person is unconscious, turn his/her head or entire body onto the left side. Be cautious about performing CPR; use a mouth-to-mouth resuscitator if available.

2. Inhalation of Chemicals

- Evacuate the area and move the victim to fresh air.
- Immediately call 911.
- When the victim is not breathing, perform CPR. Be cautious as the mouth-to-mouth contact can result in the responder becoming poisoned. Where available use a mouth-to-mouth resuscitator.
- When the victim is breathing, loosen his/her clothing and maintain the airway.
- Place one hand under the injured person's neck and gently lift.

- Rotate the injured person's head back to obtain maximum extension of the neck by pressing down on his/her forehead with your free hand.
- If additional airway extension is necessary, pull the injured person's lower jaw into a jutting-out position.
- Treat the person for chemical burns of the eyes and skin.

4.14 Reporting Injuries

Any person who responds to a laboratory injury is required to complete an incident report form. See Appendix B. This form serves as a record, provides standardized procedures for the responder, and provides the Safety Committee information that will assist in the detection and prevention of injuries in NSU laboratories. A copy of the incident report form must be submitted to EH&S, and one retained for the departmental files. Upon receipt of the form, EH&S will make copies and send them to the Chairperson of the Safety Committee. Please note that the incident report form does not take the place of the accident report required to be submitted (due within 48 hours of the incident). The accident report is filed with the University Legal Counsel and remitted to EH&S for review and accident investigation.

Section 5: Emergency Equipment

Proper maintenance of the safety equipment is vital to the health and welfare of all laboratory personnel. The emergency items (showers, eyewash stations and fire extinguishers) described below, common to all laboratories, must be properly maintained and regularly inspected to prevent or respond to laboratory accidents or emergencies.

5.1 Safety Showers and Eyewash Stations

All laboratories using hazardous chemicals, particularly corrosive chemicals, and biological specimens must have access to eyewash and/or an emergency shower. Each emergency eyewash and shower station must be activated weekly by laboratory staff to check that it works correctly. This weekly test should be recorded in your lab equipment maintenance record book.

A. Safety Showers

1. Use and Maintenance
 - Safety showers should be in a **clearly marked and accessible** location. The station should be no more than 50 feet, or 10 seconds, away from every lab workbench.
 - Laboratory workers should be able to locate the shower(s) with their eyes closed (emergency situations may leave victim temporarily blind).
 - Safety showers are operated by grasping a ring chain or triangular rod.
 - The pull mechanism is designed for people of all heights. It should always be accessible and hang freely.
 - Safety shower should supply a continuous stream of water to cover the entire body.
 - Individuals should remove clothing, including shoes and jewelry, while under an operating shower.
 - Safety showers should be located **AWAY** from electrical panels or outlets.
 - Plumbed equipment shall be activated weekly to verify proper operation.
 - Safety showers should be inspected annually to assure conformance with ANSI Z358.1 section (4) requirements.

- If at all possible, safety shower facilities should be installed near appropriate drainage systems.
2. Types of Safety Showers
 - Ceiling/Wall Emergency Shower: provides a continuous water flow and mounts directly to overhead vertical pipes or horizontal wall pipes.
 - Deck-Mounted Drench Hose: a hand operated for quick spot washing of injuries.
 - Floor-Mounted Emergency Combination: eye wash/face and body wash mounts directly to horizontal wall pipes.

B. Eyewash Stations

Eyewash stations should be readily available and accessible to all laboratory personnel. The station should be clearly marked and in accessible locations no more than 10 seconds or 50 feet away from every lab work station. Laboratory workers should be able to locate the nearest eye wash station with their eyes closed (eye injuries may involve temporary blindness). Eye injury usually accompanies a skin injury. For this reason, eye wash stations should be located near the safety shower so that eyes and body can be washed.

1. Use and Maintenance
 - **Water/eye solutions should not be directly aimed onto the eyeball, but rather, aimed at the base of the nose.** This increases the chance of effectively rinsing the eyes free of chemicals (harsh streams of water may drive particles further into the eyes).
 - Eyelids have to be **forcibly** opened to ensure effective washing behind the eyelid.
 - Be sure to wash from the nose out to the ear this will avoid washing chemicals back into the eye or into an unaffected eye.
 - Flood eyes and eyelids with water/eye solution for a minimum of 15 minutes.
 - Remove contact lenses as soon as possible to rinse eyes of any harmful chemicals.
 - Cover both of the victim's eyes with clean or sterile gauze.
 - Call 911.
 - Plumbed equipment shall be activated weekly to verify proper operation.
 - Eye wash stations should be inspected annually to assure conformance with ANSI Z358.1 section (6) requirements.
 - Plumbed eye wash stations should have protective covers to protect nozzles from airborne contaminants.
2. Types of Eye Wash Stations
 - Gravity Feed Self-Contained: provides the laboratory worker with emergency eye wash treatment in areas inaccessible to plumbing.
 - Faucet-Mounted: (pin or push plate activators) provides continuous water flow while freeing hands to open eyelids. It turns a standard faucet into a practical emergency eye wash station.
 - Laboratory Bench: sprays with a squeeze handle can be installed through the bench top for instant availability.
 - Swivel Eye Wash: mounts on lab bench or counter top adjacent to a sink. It swivels 90 degrees over the sink for use, or out of the way for storage.
3. Personal Wash Unit (Eye Wash Bottles)

Eye wash bottles should never replace permanent emergency eye wash facilities when they are required. The main purpose of Eye Wash Bottles is to supply immediate flushing. When this has been done, the injured person should go to an emergency eye wash and flush the eyes for the required 15 minutes. **Due to the flow requirements outlined in the ANSI standard, hand held bottles do not qualify as approved eyewashes.**

5.2 Fire Safety Equipment

Ignition sources must be located away from flammable and combustible materials. There are many potential ignition and fuel sources in laboratories. Common laboratory ignition and fuel sources include bunsen burners, hot plates, and heating mantles, peroxides and peroxide formers, damaged electrical cords and extension cords, class III and IV lasers, and flammable and combustible chemicals. Always use heating apparatus, Bunsen burners, and flammable and combustible chemicals in the fume hood.

A. Fire Alarms

Alarms are designed so that all endangered laboratory personnel are alerted. All faculty, staff and students should become familiar with the EXACT LOCATION of the fire alarm stations nearest to their laboratory.

B. Fire Extinguishers

Fire Extinguishers are classified according to a particular fire type and are given the same letter and symbol classification as that of the fire.

TYPE A -- Combustibles wood, cloth, paper, rubber and plastics

TYPE B -- Flammable Liquids - oil, grease and paint thinners

TYPE C -- Energized Electrical Equipment - electrophoresis

TYPE D -- Combustible Metals (magnesium, titanium, sodium, lithium, potassium)

Multipurpose Extinguishers are highly recommended because they are an effective agent against Types A, B, and C fires. Extinguishers should be identified by appropriate signage and securely located on the wall near an exit. All extinguishers should be inspected at least every 12 months and replaced or recharged if they have been used, damaged, or discharged.

How to Use a Fire Extinguisher

Fire extinguishers are not designed or intended to extinguish large fires, but if used properly, can control or extinguish a small fire. A small fire is defined as one that could occur in a standard office trash can. When a fire or suspected fire, i.e., smoke, is discovered, the first reaction should always be to activate the fire alarm system, call 911, and evacuate the building according to the evacuation plan. Fire extinguishers are provided in all University buildings and can be used provided the person is properly trained to use the extinguisher. The following are guidelines in making the decision as whether to use the unit, and how to use the extinguisher.

1. SHOULD I USE THE EXTINGUISHER?

If you ask yourself this, it's too late. Don't use the unit, leave the building.

2. HOW TO USE AN EXTINGUISHER: Remember the "PASS" word.

PULL THE PIN: Place your hand on the top of the cylinder and pull the pin. This will unlock the handle and allow you to activate the unit.

AIM: the nozzle of the hose at the base of the fire.

SQUEEZE: the handle (lever) releasing the fire fighting agent.

SWEEP: the nozzle from side to side over the fire. Keep the nozzle/hose directed at the base of the flame. Empty the fire extinguisher onto the fire.

3. PERSONAL SAFETY PRECAUTIONS

- Never reach over the fire.
- Never allow the fire to get between you and the exit from the room.
- Never enter an unknown area to fight a fire, especially in a chemistry lab.
- Always notify the proper fire officials.

C. Blankets

Laboratory personnel are **DISCOURAGED** from using fire safety blankets as a means to extinguish a fire. Fire safety blankets should be used as a means to keep shock victims warm.

D. Sand/Absorbent Material

Sand and other absorbent material is designed for fast and easy extinguishing of **small** fires in the laboratory. These materials should be stored in a handy dispenser, appropriately labeled, and used according to the type of fire. Do not use sand buckets as ash trays!

E. Sprinklers

Sprinkler systems are installed throughout University buildings and are automatically activated. Laboratory workers should not attempt to shut off the system.

- Items in the lab should be stored at least 18 inches away from the sprinkler heads.
- Items should not hang from the sprinkler heads.
- Intense heat should not be used near the sprinkler heads.

Section 6: Personal Protective Equipment (PPE) and Latex Allergy

Personal Protective Equipment (PPE) is used by employees to protect them from the risk of injury and chemical exposure by creating a barrier against workplace hazards. PPE must be used when administrative and/or engineering controls are not effective. PPE is not a substitute for good work practices.

6.1 Protective Devices

The University shall supply personal protective equipment to all laboratory personnel. Protective equipment must meet the ANSI and OSHA standards. The design should be safe and constructed so as not to restrict or impede movement or the ability to work.

Hazards vs PPE (minimum PPE requirements)

Hazard	Eyes	Face	Body/Hands
Any laboratory or general use of chemicals	Safety glasses (all times in lab)		Normal work/lab attire (no sandals, shorts, etc) with over-garment (smock, lab coat, or coveralls), & gloves
Use of corrosive chemicals, strong oxidizing agents, carcinogens, mutagens, etc.	Chemical splash goggles	Full face shield over goggles (if gallon or more liquid)	Resistant gloves (see glove selection guide), resistant apron or over-garment (full protective suit for work with over 5 gal corrosive liquids)
Sharp objects, glass, insertion of tubes into stoppers	Safety glasses		Heavy cloth barrier or leather gloves
Temperature extremes	Safety glasses (goggles if possible splash)	Recommend full face shield (large quantity gas/liquid or sparking)	Insulated gloves for ovens, furnaces, cryogenics & devices over 100C or below -1C, use over-garment for hot/cold liquids & sparking

A. Eye and Face Protection

Employees who are exposed to hazardous chemicals and infectious materials must wear face protective equipment to prevent contamination of the mucosal membranes from splashing or aerosols. Safety glasses or goggles are made of impact resistant lenses and stronger frames than regular glasses. Face shields must be worn when working with materials that can affect facial skin or when goggles do not provide adequate protection from splashes. Eyewear must be maintained and cleaned before use, and contaminated eyewear cleaned immediately.

Prescription Safety Eyewear

Prescription glasses worn on their own do not meet the standards. OSHA regulations require that employees who wear prescription lenses while engaged in operations that involve eye hazards shall wear eye protection that incorporates the prescription in its design, or must wear eye protection that can be worn over the prescription lenses (goggles, face shields, etc.) without disturbing the proper position of the prescription lenses or the protective lenses. Additionally, contact lenses by themselves are not considered protective eyewear. Contact lens wearers exposed to hazardous chemicals must also use the appropriate face protection.

Safety Glasses

Safety glasses provide eye protection from moderate impact and particles associated with grinding, sawing, scaling, broken glass, and minor chemical splashes, etc. Side protectors are required when there is a hazard from flying objects. Safety glasses do not provide adequate protection for processes that involve heavy chemical use such as stirring, pouring, or mixing. In these instances, splash goggles should be used.

Splash Goggles

Splash goggles provide adequate eye protection from many hazards, including potential chemical splash hazards, use of concentrated corrosive material, and bulk chemical transfer. Be aware that

goggles designed for woodworking are not appropriate for working with chemicals. These types of goggles can be identified by the numerous small holes throughout the facepiece. Ensure the goggles you choose are rated for use with chemicals.

Face Shields

Face shields consist of an adjustable headgear and face shield of tinted or clear lenses or a mesh wire screen. They should be used when the entire face needs protection and should be worn to protect the eyes and face from flying particles, metal sparks, and chemical/biological splashes. Face shields with a mesh wire screen are not appropriate for use with chemicals. Face shields should always be worn with a primary form of eye protection such as safety glasses or goggles.

Protective Clothing

Laboratory gowns or coats must be worn to protect street clothing and provide protection against biological and chemical spills as well as provide additional body protection. Laboratory personnel are to wear the correct attire when working with hazardous materials. Employees should wear clothing that will protect them. Open-toed shoes or sandals are prohibited.

A laboratory gown should be the traditional knee-length, long sleeved, cuffed coat that can be snapped closed to protect clothing. Plastic or rubber aprons can be worn over laboratory coats for extra protection when working with corrosive or irritating liquids. When a coat becomes contaminated or torn, it must be removed immediately and either discarded if disposal or placed in the soiled laundry container.

Gloves

Gloves should be worn whenever there is a possibility of skin contact with chemical, radiological and biological agents, hazardous materials, and rough or sharp objects. Dermatitis, inflammation of the skin or latex allergies accounts for a high number of work-related diseases. Nitrile gloves seem to be the most popular in clinical laboratories today. Always wash hands thoroughly before and after glove use. See the EH&S Laboratory Safety Plan for detailed information on the selection and correct usage of gloves.

D. Respiratory Protection

Respirators are not recommended for routine laboratory work, but should be used when general ventilation or a fume hood does not reduce the chemical exposure to acceptable levels. The use of respirators requires the training of employees and each respirator has to be specially fitted.

E. Foot Protection

Open-toe shoes and clogs are prohibited. It is preferred that the soles be non-slip and the shoes made from leather, it is not advisable to wear perforated shoes, sandals, or cloth sneakers.

6.2 Latex Allergy

Latex allergic reactions to natural rubber latex are becoming more common. Latex gloves expose employees through two routes – skin contact with the latex allergens and inhalation of latex proteins that are released into the air bound to the powders used to lubricate the gloves. Employees that are repeatedly exposed to latex products are at an increased risk of developing an allergy to latex. Sensitization can develop over time. A person with an allergic reaction to latex

exposure develops symptoms such as skin rash and inflammation, respiratory irritation, asthma and can lead to life-threatening anaphylactic reactions. Rashes can also be a result of the powder in the gloves or not related to the use of latex gloves at all. The sensitization will decrease when the exposure to latex is stopped.

Section 7: Engineering Controls

Engineering controls are usually automatic devices that will protect employees from the risk of hazardous exposure and is considered the first line of defense in the laboratory for protection. Examples may include chemical fume hoods, glove boxes, safety shields, and proper storage facilities. General room ventilation is not adequate to provide proper protection against bench top use of hazardous chemicals.

The OSHA Laboratory Standard requires that fume hoods and other protective equipment function properly and that specific measures are taken to ensure proper and adequate performance of such equipment. Laboratories must maintain equipment according to manufacturer's specifications or established guidelines. Routine inspections should also be performed to check for common problems like: damaged electrical cords, corrosion, worn parts, excessive contamination, leaks, etc. Alarms, guards, interlocks or other safety devices should also be checked to ensure that they have not been disconnected or defeated. The equipment will be inspected annually by Facilities Management or EH&S. An inspection tag/card/sticker should be attached to the equipment with a record of inspection dates.

It is the responsibility of laboratory personnel to immediately report malfunctioning protective equipment, such as fume hoods, or mechanical problems to EH&S as soon as any malfunctions are discovered.

7.1 Fume Hoods

A fume hood prevents the inhalation of potentially harmful substances, deters uncontrolled splashes and spills from entering the lab environment, and removes flammable vapors from the indoor atmosphere.

A. When to Use a Chemical Fume Hood


A chemical fume hood is a necessary part of your laboratory procedure when:

- Working with hazardous or suspect hazardous chemicals
- Working with chemicals having unknown properties
- Pouring, mixing, weighing and dispensing chemicals

B. How to Use a Fume Hood

Fume hoods are minimally equipped with a blower, cabinet, and exhaust ductwork. The cabinet is designed to contain hazardous chemicals. The blower is designed to pull air away from the front of the cabinet and keep the hazardous chemicals from reaching the indoor environment and user. The exhaust ductwork is independent from other indoor air ductwork and is used to transport any hazardous chemical fumes, gases, vapors, or aerosols to the outside environment.

Baffles are located across the inside rear of the hood. They assist in controlling the airflow pattern through the hood. Baffles can be adjusted to minimize hazards caused by the different characteristics of chemicals being utilized in the hood system.

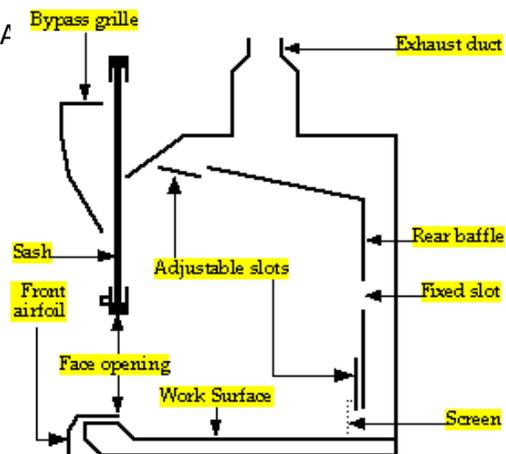


- For normal use, the top, bottom, center, and side slots are all adjusted to the open position to provide an even airflow.
- Gases or fumes that are heavier-than-air require the baffles to be adjusted for the maximum airflow at the bottom of the hood. To adjust the hood, close the top slot then arrange the center, bottom, and side slots in the open position.
- Gases or fumes that are lighter-than-air require a maximum airflow at the top of the hood. In those instances, open the top baffles to their maximum position and maintain the side and center baffles in their normal position and completely close the bottom slot.

A fume hood must have a face velocity sufficient to pull the air away from the user. ANSI recommends that laboratory fume hood face velocity be between 80 to 120 feet per minute (fpm) for optimal safety. Exhaust rates in newer fume hoods are often controlled by a variable air volume system. Variable air volume technology allows for the maintenance of a constant face velocity while varying exhaust volume in response to changes in the sash position. The exhaust volume is varied in response to a series of sensors that receive and send signals to the exhaust valve. Annual calibration of the VAV system is necessary to ensure the appropriate flow is being afforded the user. The point of optimal flow is established through calibration of the equipment. When the sash is opened above or below the optimal flow point the face velocity will decrease.

C. Fume Hood Safety Practice

A functioning fume hood and appropriate laboratory ventilation will provide adequate protection during standard laboratory manipulations. The fume hood should be used in conjunction with other safety equipment when toxic chemicals having exposure limits in the low parts per billion ranges are being utilized.

1. Keep all apparatus at least 6 inches from the face of the hood.
2. Do not put your head in the hood when contaminants are being generated.
3. Do not use the hood to evacuate containers of volatile waste chemicals.
4. All protective clothing should be worn when working with chemicals in the hood. In addition to gloves, safety glasses, and lab coats, a face shield will provide an extra measure of safety from reactive chemicals.

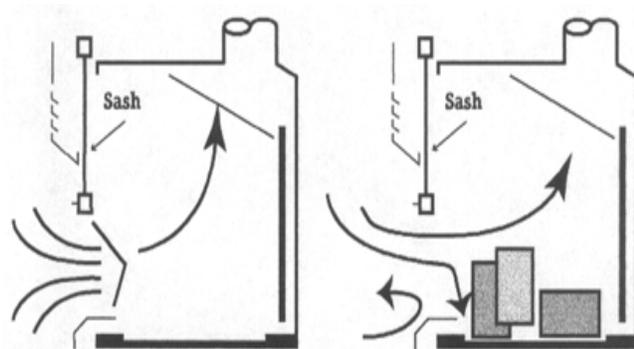

Demonstration of Airflow Patterns through empty & cluttered fume hoods.

5. Minimize the quantity of chemicals and apparatus being used in the hood. Excessive storage of items in the fume hood will impair its performance.
6. All operations that may generate air contaminants above their exposure limits must be conducted inside a fume hood.
7. Do not use a fume hood if it is not working appropriately. Test the airflow periodically. If a flow meter is not available, a kimwipe placed at the base of the hood will be gently lifted when appropriate airflow is provided. The kimwipe should not be pulled into the exhaust. This indicates the airflow is too high.
8. Maintain the slots in the hood baffle free from obstructions.
9. Do not remove the hood sash, panels or sensors. Keep all wiring between hood electronics and sensors intact.
10. The laboratory supervisor must approve the use of hazardous solids (powders). (Many potential problems arise when the solid is fine enough to become airborne.)
11. Do not place receptacles or other sources of sparks inside the hood when flammable liquids or gases are present.
12. Use an appropriate barricade if an explosion or other violent reaction is possible.
13. Do not remove hood labels that indicate the maximum safe operating level of the sash.
14. Use only specially designed fume hoods for operations that may require the use of perchloric acid. The use of this material may cause the formation of explosive perchlorate crystals. Special fume hoods, commonly known as **Perchloric Acid Fume Hoods**, **MUST** be used for this purpose. These hoods have self-contained wash-down units to inhibit crystal formation.
15. Ensure all fume hoods have a spill protection lip.

D. Maintenance

Solid objects or materials should not be allowed to enter the exhaust ducts at the rear of the hood, as they can become lodged in the duct or fan. Any hood or component of ventilation not properly functioning must be taken out of service and clearly tagged. The lab worker should not be able to detect strong odors released from materials in the hood area. If odors are detected, check to make sure that the ventilation fan is turned on. If the operating condition of a fume hood needs to be checked, call EH&S. An emergency plan should exist in case of hood ventilation malfunction.

7.2 Perchloric Acid Fume Hoods


Procedures using concentrated perchloric acid (>70%) or which heat any amount or concentration of perchloric acid must be performed in a closed system or within a specially designed perchloric acid fume hood with wash down systems to prevent the accumulation of explosive perchlorates in the hood and ducting. For assistance in locating a perchloric acid fume hood call EH&S.

7.3 Glove Boxes

A glove box is a sealed container that is designed to allow one to manipulate objects where a separate atmosphere is desired. Positive pressure glove boxes are used when you are trying to protect your material from contamination. Negative pressure glove boxes are used to provide increased operator protection. Glove boxes should be thoroughly tested before each use and there should be a method of monitoring the integrity of the system (such as a pressure gauge).


7.4 Biological Safety Cabinets

Biological Safety Cabinets are the most common and effective primary containment devices in the laboratory for working with infectious agents. The CDC has a publication entitled “*Primary Containment for Biohazards: Selection, Installation and Use of Biological Safety Cabinets*” which is available on their website at: www.cdc.gov/od/ohs/biosfty/bsc/bsc.htm.

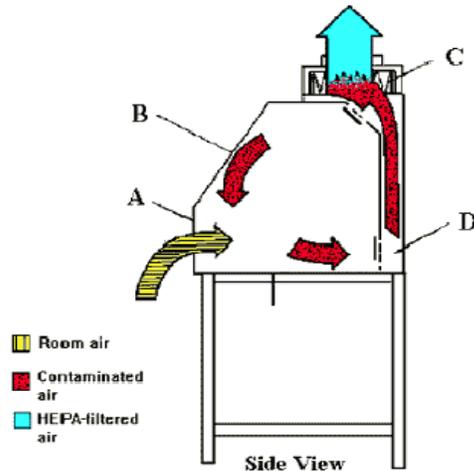

The Class I BSC

- A. front opening
- B. sash
- C. exhaust HEPA
- D. exhaust plenum

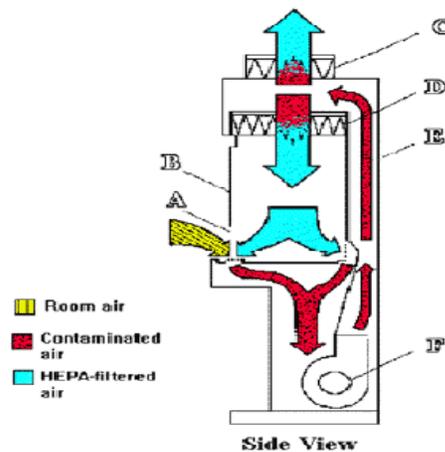

The Class II, Type A BSC

- A. front opening
- B. sash
- C. exhaust HEPA filter
- D. rear plenum
- E. supply HEPA filter
- F. blower

Biological Safety Cabinets are designed to combine directional airflow with high efficiency particulate (HEPA) filters to protect employees and the environment from airborne microorganisms. Discharged air passes through the HEPA filters which remove 99.97% of the particles with a mass median aerodynamic diameter (MMAD) of 0.3 microns thus eliminating most bacteria, viruses and spores from circulation. The Class II BSC is most common for clinical laboratories and approved for BSL-2 and BSL-3 use while the Class III BSC is approved for BSL-4 microbiological agents.

A. Certification

The functional operation and integrity of each BSC should be certified to current performance standards at the time of installation and annually thereafter by qualified technicians, according to the manufacturer’s instructions.

B. Cleaning and Disinfection

All items within BSCs, including equipment, should be surface-disinfected and removed from the cabinet when work is completed, since residual culture media may provide an opportunity for microbial growth. The interior surfaces of BSCs should be disinfected or decontaminated before and after each use. At the end of the work day, surface decontamination should include a wipe-down of the work surface, the sides, back and interior of the glass. A solution of bleach or 70%

alcohol should be used where effective for target organisms. A second wiping with sterile water is needed when a corrosive disinfectant, such as bleach, is used. It is recommended that the cabinet is left running. If not, it should be run for 5 min in order to purge the atmosphere inside before it is switched off.

C. Decontamination

BSCs must be decontaminated before filter changes and before being moved. BSC decontamination should be performed by a qualified professional.

D. Personal Protective Equipment

Personal protective clothing should be worn whenever using a BSC. Laboratory coats are acceptable for work being performed at Biosafety Levels 1 and 2. Gloves should be pulled over the wrists of the gown rather than worn inside. Elasticized sleeves can be worn to protect the investigator's wrists. Masks and safety glasses may be required for some procedures.

E. Alarms

BSCs can be equipped with one of two kinds of alarm. Sash alarms are found only on cabinets with sliding sashes. The alarm signifies that the operator has moved the sash to an improper position. Corrective action for this type of alarm is returning the sash to the proper position. Airflow alarms indicate a disruption in the cabinet's normal airflow pattern. This represents an immediate danger to the operator or product. When an airflow alarm sounds, work should cease immediately and the laboratory supervisor should be notified.

7.5 Chemical Storage Cabinets

Chemical Storage Cabinets should be labeled with the relevant hazard information associated with the chemicals stored in them. Storage of flammables and corrosives in the lab should be limited to as small a quantity as possible and should be stored in ventilated cabinets which meet OSHA 1910.106d and NFPA 30 specifications.

- Chemicals should **NEVER** be stored in alphabetical order (unless already separated out into compatible groups). This system may contribute to the high probability of incompatible materials being stored next to one another.
- Incompatible reagents should not be stored next to each other.
- Storage outside the cabinet should be kept to a minimum.
- Glass containers should be stored on the bottom shelf of storage cabinets, if possible.

Types of Cabinets:

- Flammable liquid cabinets: designed for storage of flammable or combustible liquids.
- Acid/corrosive cabinets: designed for corrosion resistance.
- Bulk storage cabinets: can be used for storage of flammable and corrosive liquids outside the laboratory setting.

7.6 Individual Storage Containers

Many types of containers are required depending on the quantities and classes of flammable or combustible liquids in use. A **safety can** is an approved container of not more than 5 gallons capacity that has a spring closing lid and spout cover. Safety cans are designed to safely relieve

internal pressure when exposed to fire conditions. A *closed container* is one sealed by a lid or other device so that liquid and vapor cannot escape at ordinary temperatures.

Section 8: Laboratory Equipment and Procedures

All equipment in the laboratory must be operated in a safe manner and if the equipment is malfunctioning, a sign needs to be placed to warn employees of its unsafe function. Safety devices on equipment must not be tampered with or disconnected.

8.1 Refrigerators

While domestic refrigeration units are appropriate for keeping foods cold, they are not designed to meet the special hazards presented by flammable materials. Therefore, laboratory refrigerators should be carefully selected for specific chemical storage needs. To prevent potential safety hazards, the length of storage of any material should be kept to a minimum. In addition, refrigerators should be periodically inspected.

A. Refrigerator and Freezer Hazards

The potential hazards posed by laboratory refrigerators and freezers involve vapors from the contents, the possible presence of incompatible chemicals, and spillage. Loss of electrical power can produce extremely hazardous situations. Flammable or toxic vapors may be released from refrigerators and freezers as chemicals warm up and/or certain reactive materials may decompose energetically upon warming.

B. Laboratory Refrigerator/Freezer Design

Only refrigerators and freezers designed for laboratory use should be utilized for the storage of chemicals. These refrigerators have been constructed with special design factors, such as heavy duty cords and corrosion-resistant interiors to help reduce the risk of fire and explosion. Only chemicals should be stored in chemical storage refrigerators; lab refrigerators should not be used for food storage or preparation.

C. Refrigerator / Freezer Labeling

Refrigerators and freezers should be labeled clearly for their intended purpose (e.g., "No Food or Drink to be Stored in this Refrigerator", "Refrigerator For Food Only", "NO FOOD - CHEMICAL STORAGE ONLY", "Not For Flammable Storage", etc.)

Flammable Liquid Storage Standard refrigerators have electrical fans and motors that make them potential ignition sources for flammable vapors. Therefore, flammable chemicals or chemical mixtures that must be kept below room temperature must be stored in refrigerators or freezers specifically designed by the manufacturer to be explosion proof.

All other refrigerators or freezers not specifically designed to be explosion proof should be labeled with a prominent warning sign indicating that they are unsuitable for the storage of flammable substances. Electric heaters used to defrost the freezing coils can also spark. To ensure its effective functioning, a freezer should be defrosted manually when ice builds up.

D. Refrigerator/Freezer Contents

All materials in refrigerators or freezers should be labeled with the contents, owner, date of acquisition or preparation, and nature of any potential hazard. All containers should be sealed, preferably with a cap, and placed in secondary containers or catch pans.

E. Refrigerator/Freezer Explosions

Flammable liquids must only be stored in refrigerators which have no internal ignition sources. To prevent refrigerator and freezer explosions, laboratory supervisors must vigorously enforce the following:

- All materials with a flashpoint below 100° F may only be stored in a UL approved flammable materials storage refrigerator or freezer. These units do not have any internal ignition sources.
- All ordinary domestic refrigerators and freezers should be labeled with the phrase “No materials with a flashpoint below 100° F may be stored in this refrigerator/ freezer” or “Not for flammable storage.”

8.2 Incubators

Laboratory incubators are used for a number of purposes in different section of science and research. Laboratory personnel are responsible for checking temperatures and CO₂ levels, changing charts on chart recorders if applicable, and for general maintenance and cleaning of incubators. All temperatures and CO₂ values must be documented. When cleaning or maintaining incubators, personnel are to use good laboratory practices. Further, personnel shall wear safety glasses when working with 70% (v/v) Isopropyl Alcohol. Any maintenance of incubators must be documented.

8.3 Centrifuges

A centrifuge is a piece of equipment, generally driven by an electric motor that puts an object in rotation around a fixed axis, applying a force perpendicular to the axis. Centrifugation may present two serious hazards: mechanical failure and dispersion of aerosols.

A. Safe Procedures for Centrifugation

Before centrifugation

- Use only rotors compatible with the centrifuge. Check the expiration date for ultracentrifuge rotors.
- Check tubes, bottles, and rotors for cracks and deformities before each use.
- Make sure that the rotor, tubes, and spindle are dry and clean.
- Examine O-rings and replace if worn, cracked, or missing.
- Never overfill centrifuge tubes (don't exceed $\frac{3}{4}$ full).
- Always cap tubes before centrifugation.
- Always balance buckets, tubes, and rotors properly.
- Check that the rotor is seated on the drive correctly, close the lid on the centrifuge, and secure it.
- When using swinging bucket rotors, make sure that all buckets are hooked correctly and move freely.

During centrifugation

- Close lids at all times during operation. Never open a centrifuge until the rotor has stopped.
- Do not exceed safe rotor speed.
- Stop the centrifuge immediately if an unusual condition (noise or vibration) begins and check load balances.

After centrifugation

- Allow the centrifuge to come to a complete stop before opening.
- Wear new pair of outer gloves to remove rotor and samples.
- Check inside of centrifuge for possible spills and leaks, clean centrifuge and rotor thoroughly if necessary.
- Wash hands after removing gloves.

B. Spills, Malfunctions and Failures

Centrifuge spills of infectious materials transmitted by inhalation

- If a spill has occurred, hold breath, close the centrifuge lid, turn centrifuge off, and immediately leave the lab.
- Notify others to evacuate, close the door, post a biohazard spill sign at the lab door.
- Remove any contaminated protective clothing and place in a biohazard bag. Wash hands and any exposed skin surfaces with soap and water. Seek medical attention as necessary.
- Report spills to laboratory supervisor. Call Safety Officer or EH&S Office for assistance.

Centrifuge malfunction, rotor failure, or tube breakage of materials **not transmitted by inhalation**

- If a centrifuge malfunctions while in operation, turn it off immediately and unplug.
- If tube breakage occurs, turn centrifuge off immediately. Leave for 30 minutes to reduce the risk of aerosols. The operator should wear proper gloves, remove debris, clean and disinfect centrifuge interior, rotors, safety cups or buckets following the manufacturer's instructions.

8.4 Autoclaves

An autoclave is a device to [sterilize](#) equipment and supplies. No one should use an autoclave unless they have received recent instructions in autoclave procedure or are working under the direct supervision of an experienced employee with autoclave knowledge. Use caution when removing equipment and supplies from an autoclave as glassware may have cracked during autoclaving.

Steam (sterilizing) Autoclaves

The major hazards include, but are not limited to:

1. Burns resulting from physical contact with the structure of the autoclave.
2. Steam burns arising from contact with steam issuing from the apparatus.
3. Explosive breakage of glass vessels during the opening and unloading.
4. Burns arising from careless handling of vessels containing boiling liquids.

Top-loading Autoclaves

Beware of residual steam in the apparatus. Remove the lid cautiously keeping the body as far away from the apparatus as possible. Do not lean over the autoclave to examine the contents.

Front-loading Autoclaves

In using front-loading autoclaves, it is recommended to stand so that as the door is opened it shields your body from the contents of the autoclave. Watch your feet! Sometimes boiling liquid accumulates in the autoclave and runs out as the door opens.

8.5 Vacuum Systems

Vacuum systems pose severe implosion hazards. Conduct all vacuum operations behind a table shield or in a fume hood. Do not underestimate the pressure differential across the walls of glassware that can be created by a water aspirator. When using vacuum systems, follow the below guidelines and requirements to ensure system safety:

1. Ensure that pumps have belt guards in place during operation.
2. Ensure that service cords and switches are free from defects.
3. Always use a trap on vacuum lines to prevent liquids from being drawn into the pump, house vacuum line, or water drain.
4. Replace and properly dispose of vacuum pump oil that is contaminated with condensate. Used pump oil must be disposed as hazardous waste.
5. Place a pan under pumps to catch oil drips.
6. Do not operate pumps near containers of flammable chemicals.
7. Do not place pumps in an enclosed, unventilated cabinet.

The glassware used with vacuum operations must meet the following requirements:

1. Only heavy-walled round-bottomed glassware should be used for vacuum operations. The only exception to this rule is glassware specifically designed for vacuum operations, such as an Erlenmeyer filtration flask.
2. Wrap exposed glass with tape to prevent flying glass if an implosion occurs.
3. Carefully inspect vacuum glassware before and after each use. Discard any glass that is chipped, scratched, broken, or otherwise stressed.

Glass desiccators often have a slight vacuum due to contents cooling. When using desiccators, follow these guidelines:

1. When possible, use molded plastic desiccators with high tensile strength.
2. For glass desiccators, use a perforated metal desiccators guard.

8.6 Compressed Gas Cylinders

Compressed gases are used in many laboratories for analytical or instrument operations but these gases can be toxic, combustible, explosive, poisonous, corrosive, inert, or a combination of hazards. As compressed gases are under a great deal of pressure, there is the potential for simultaneous exposure to both mechanical and chemical hazards. Thus, careful handling procedures are necessary when working with various compressed gases and cylinders; the regulators or valves used to control gas flow, and the piping used to confine gases during flow. The types of gases that may be found in a laboratory are:

- Compressed - pressurized gas at a temperature greater than their boiling point (oxygen,

nitrogen and argon).

- Liquefied – gases stored under high pressure at a temperature greater than their boiling point (carbon dioxide, propane, butane and chlorine).
- Dissolved – another container is inside the cylinder where the gas is dissolved (acetylene is a gas dissolved in acetone).

Although each DOT approved gas cylinder is designed, constructed, and tested to safely contain its contents, additional procedures should be followed in handling and storing compressed gas cylinder. These additional procedures are:

1. Cylinders must be clearly labeled with their contents.
2. Regulators must be compatible with the cylinder contents and valve.
3. Cylinders must be properly secured at all times.
4. Cylinders must be stored in a cool, well-ventilated area away from sources of ignition, electricity, and heat.
5. Empty or unused gas cylinders must always be capped.
6. Cylinder carts must be used to transport capped cylinders.
7. Cylinders containing flammable gases must not be stored near oxidizers.
8. Cylinders must not be stored near corrosives.
9. Cylinders must be stored away from doors and exits.

The Receiving Department of each campus will handle the delivery and collection of gas cylinders. All cylinders (new, used, or empty) must be secured at all times. Chains, belts, or clamps should be used to secure cylinders to the walls or benches in the laboratory. Do not store gas cylinders in the hallway. The use of disposable or lecture size cylinders is strongly discouraged. If special circumstances warrant the use of these types of cylinders, the Principal Investigator is responsible for the additional costs of disposal.

8.7 Cryogenic Liquids

Cryogenic fluids, such as liquid air, liquid nitrogen, or liquid oxygen, are used to obtain extremely cold temperatures. Most cryogenic liquids are odorless, colorless, and tasteless when vaporized, however, they create a highly visible and dense fog when exposed to the atmosphere. All cryogenics other than oxygen can displace breathable air and can cause asphyxiation. Cryogenics can also cause frostbite on exposed skin and eye tissue. Cryogenic vapors from liquid oxygen or liquid hydrogen may cause a fire or explosion if ignited. Liquid nitrogen or liquid helium, are capable of condensing atmospheric oxygen and causing oxygen entrapment or enrichment in unsuspected areas.

Additional hazards include the following:

Cryogenic Hazard Source	Hazard
Hydrogen, methane, and acetylene	Gases are flammable.
Oxygen	Increases the flammability of combustibles.
Liquefied inert gases	Possible oxygen entrapment.
Extremely cold surfaces	Oxygen atmosphere may condense.

Follow these guidelines when working with cryogenic liquids:

- Keep equipment and systems extremely clean.
- Avoid skin and eye contact with cryogenic liquids. Do not inhale cryogenic vapors.
- Pre-cool receiving vessels to avoid thermal shock and splashing.
- Use tongs to place and remove items in cryogenic liquid.
- When discharging cryogenic liquids, purge the line slowly. Only use transfer lines specifically designed for cryogenic liquids.
- Rubber and plastic may become very brittle in extreme cold. Handle these items carefully when removing them from cryogenic liquid.
- Store cryogenic liquids in double-walled, insulated containers (e.g., Dewar flasks).
- To protect yourself from broken glass if the container breaks or implodes, tape the exposed glass on cryogenic containers.
- Do not store cylinders of cryogenic liquids in hallways or other public areas.

IMPORTANT: Be aware of the tremendous expansion and threat of asphyxiation when a cryogenic liquid vaporizes at room temperature.

8.8 Electrophoresis

Electrophoresis equipment may be a major source of electrical hazard in the laboratory. The presence of high voltage and conductive fluid in this apparatus presents a potentially lethal combination. Even a standard electrophoresis operating at 100 volts can deliver a lethal shock at 25 milliamps. A slight leak in the device tank can result in a serious shock. Use appropriate precautions to protect yourself from the hazards of electrophoresis and electrical shock.

8.9 Ultraviolet Light

Ultraviolet light (UV) is non-ionizing radiation in the 180 to 400-nanometer wavelength region of the electromagnetic spectrum. The ultraviolet spectrum is commonly divided into the following three regions:

Region	Region Name	Wavelength (nm)
UVA	Black Light	315-400
UVB	Erythermal	280-314
UVC	Germicidal	180-280

Exposure to ultraviolet radiation is typically limited to the UVA region resulting from exposure to direct sunlight. There are several sources of UV radiation in the laboratory including germicidal lamps in biological safety cabinets, nucleic acid transillumination boxes, nucleic acid crosslinkers and UV lasers. Some equipment can generate concentrated UV radiation in all the spectral regions that, if used without the appropriate shielding and personal protective equipment, can cause injury with only a few seconds of exposure.

A. Hazards associated with exposure to ultraviolet light

Symptoms of overexposure include varying degrees of erythema (sunburn) or photokeratitis (welder's flash) typically appear hours after exposure has occurred.

Skin Injury

UV radiation can initiate a photochemical reaction called erythema within exposed skin. This “sunburn” can be quite severe and can occur as a result of only a few seconds exposure. Effects are exaggerated for photosensitized skin. Chronic skin exposure to UV radiation has been linked to premature skin aging, wrinkles and skin cancer.

Eye Injury

UV radiation exposure can injure the cornea, the outer protective coating of the eye. Photokeratitis is a painful inflammation of the eye caused by UV radiation-induced lesions on the cornea. Symptoms include a sensation of sand in the eye that may last up to two days. Chronic exposures to acute high-energy UV radiation can lead to the formation of cataracts.

B. Special work practices

Never allow the skin or eyes to be exposed to UV radiation sources. The UV radiation generated by laboratory equipment can exceed recommended exposure limits and cause injury with exposures as brief as three seconds in duration.

1. Biological Safety Cabinets: Never work in a biological safety cabinet while the germicidal lamp is on. Close the sash while lamp is on.
2. Transilluminators: Never use a transilluminator without the protective shield in place. Shields must be kept clean and replaced when damaged.
3. Crosslinkers: Crosslinkers must not be used if the door safety interlock is not working.

C. Equipment labeling

Any equipment that emits UV radiation must be conspicuously labeled with a caution label. The label should contain language similar to:

**CAUTION
UV RADIATION HAZARD
USE ONLY WITH SHIELDING IN PLACE
PROTECT EYES AND SKIN FROM EXPOSURE TO UV LIGHT**

D. Personal Protective Equipment

Protective Clothing

Wear standard laboratory apparel including a fully buttoned lab coat, long pants and closed toe shoes. While working with UV radiation sources, prevent gaps in protective clothing that commonly occur around the neck and wrist areas.

Eye/Face Protection

If there is any potential for the eyes and face to be exposed to UV radiation, a polycarbonate face shield stamped with the ANSI Z87.1-1989 UV certification must be worn to protect the eyes and face. Ordinary prescription eyeglasses may not block UV radiation. UV certified goggles and safety glasses will protect the eyes, but it is common for lab workers to suffer facial burns in the areas not covered by the goggles or glasses.

Gloves

Wear disposable nitrile gloves to protect exposed skin on the hands. Ensure wrists and forearms are covered between the tops of gloves and the bottom of the lab coat sleeves.

E. UV light/radiation services

EH&S has instrumentation to accurately measure UV radiation generated by laboratory equipment. Based upon the strength of the UV radiation source and the duration of worker exposure, we can provide information on recommended occupational exposure limits.

8.10 Glassware

Glass breakage is a common cause of injuries in laboratories. Only glass in good condition should be used.

Handling of glassware

1. Discard or send for repair all broken, chipped, starred or badly scratched glassware. Hand protection should be used when picking up broken glass.
2. Clean all glassware before sending for repair.
3. When using glass tubing, all ends should be fire polished. Lubricate tubing with glycerin or water before inserting into rubber stoppers or rubber tubing.
4. Protect hands with leather gloves when inserting glass tubing. Hold elbows close to the body to limit movement when handling tubing.
5. Do not store glassware near the edge of shelves. Store large or heavier glassware on the lower shelves.
6. Use glassware of the proper size. Allow at least 20% free space. Grasp a three-neck flask by the middle neck, not a side neck.
7. Conventional laboratory glassware must never be pressurized.

Disposal of broken glassware

Inspect all glassware before use. Do not use broken, chipped, starred or badly scratched glassware. All broken glass, whether contaminated or uncontaminated, shall be disposed in rigid, puncture proof containers such as a cardboard box with taped seams, or a plastic bucket or metal can with a sealing lid. All broken glass disposal containers shall be clearly marked "DANGER - BROKEN GLASS" Limit quantities to no more than approximately 15 to 20 pounds so that lifting of the container will not create a situation that could cause back injury.

1. Radioactive glassware: Contact the Safety Officer for specific instructions.
2. Glassware with biological contamination: Glassware that has been in contact with infectious agents may include: used slides, cover slips, test tubes, beakers, pipettes, etc. Contaminated glassware shall be disinfected before disposal. Dispose in a rigid, puncture proof container such as a box with sealed or taped edges or a metal or thick plastic can or bucket with a sealing lid. Label container "DANGER - BROKEN GLASS". Contact the Safety Officer if you require further information.
3. Glassware with chemical contamination: Empty the contents of the glassware into a suitable container if safe to do so. Contact EH&S, for assistance with decontamination and disposal of the contaminated glassware.

Section 9: Oceanographic Center Laboratory-Specific Safety Plan and Procedures

9.1 Conservation Biology Laboratory

Care must be used when handling any chemicals, specimens, or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory.

1. Work carefully and cautiously, using common sense and good judgment at all times.
2. Identify the location of all exits from the laboratory and from the building.
3. Be familiar with the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
4. Report all significant injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind to the lab manager immediately.
5. Keep sinks free of paper or any debris that could interfere with drainage.
6. Lab benches must be clear of all items that are not necessary for the lab exercise.
7. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use. **Do not leave glassware in the sink overnight.**

Sharp Objects and Broken Glass

1. Pointed dissection probes, scalpels, razor blades, and scissors must be used with great care, and placed in a safe position when not in use.
2. Containers designated for the disposal of sharps (scalpel blades, razor blades, needles; dissection pins, etc.) and containers designated for broken glass are present in the laboratory. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit contains antiseptics, bandages, and Band-Aids to care for minor cuts.
4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. **Do not place broken glass in the regular trash.**

Noxious Chemicals

1. Material Safety Data Sheets (MSDS) are available in lab. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the lab manager of any noxious chemical spills immediately. Users should wear protective gloves when using noxious chemical (e.g. ethidium bromide).
3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets.
4. Acids must be used under the hood.

Preserved Biological Samples

1. Scraps of biological samples are NOT to be disposed in the sink.
2. All biological samples are to be clearly labeled and stored in designated containers and storage cabinets.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all pipetors and boxes/containers not in immediate use in an organized manner.
3. Lab decorations (pictures, stickers) should not in general be placed in the laboratory setting.

9.2 Coral Histology Laboratory

Care must be used when handling any chemicals, specimens, or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory.

1. Work carefully and cautiously, using common sense and good judgment at all times.
2. EATING, DRINKING, AND SMOKING ARE PROHIBITED in the laboratory and in the laboratory space of a combined office/laboratory room.
3. Long hair must be tied back during laboratory work.
4. Open toed shoes are prohibited.
5. No sleeveless tops or shorts are permitted. Legs and midriffs must be covered with protective clothing while working in the laboratory. Lab coats are required.
6. Identify the location of all exits from the laboratory and from the building.
7. Be familiar with the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
8. Report all injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind, no matter how minor, to the lab manager immediately.
9. Keep sinks free of paper or any debris that could interfere with drainage.
10. Lab benches must be clear of all items that are not necessary for the lab exercise.
11. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use. Do not leave glassware in the sink.

Sharp Objects and Broken Glass

1. Pointed dissection probes, scalpels, razor blades, scissors, and microtome knives must be used with great care, and placed in a safe position when not in use.
2. Containers designated for the disposal of sharps (scalpel blades, razor blades, needles; dissection pins, etc.) and containers designated for broken glass are present in the laboratory. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit contains antiseptics, bandages, and Band-Aids to care for minor cuts.
4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. Do not place broken glass in the regular trash.
5. When cutting with a razor blade, scalpel or other sharp instrument, forceps should be used to help hold the specimen. Never use fingers to hold the specimen while cutting.

Noxious Chemicals

1. Material Safety Data Sheets (MSDS) are available in lab. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the lab manager of any spills immediately. Users should wear protective gloves when handling fixatives, decal, embedding solutions, and staining solutions.
3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets.
4. Xylene must be used under the hood.
5. All fixatives (Z-fix, formaldehyde, gluteraldehyde, etc.) must be used only under the hood.

Preserved Specimens

1. Gloves should always be used when handling preserved samples.
2. Samples in any preservative are only to be handled inside the fume hood.
3. Notify the lab manager if there is a spill of preservative.
4. Scraps of the specimen are NOT to be disposed of in the sink.
5. Specimens are to be clearly labeled and stored in designated containers.
6. Users are only permitted to work on the preparation of histology slides (including infiltration and embedding, sectioning, and staining) during scheduled lab time and under the guidance of lab personnel.

Instruments and Equipment

Microscope Handling

1. Microscopes and microscope cameras must not be moved without consulting the lab manager.
2. Microscope must be positioned safely on the table, NOT near the edge.
3. The coarse adjustment must NEVER be used to focus a specimen when the 40x or oil immersion lens is in place.
4. When finished with the microscope, the microscope, camera, and any light sources must be turned off and the microscope cover replaced.
5. All prepared microscope glass slides are to be returned to their appropriate slide trays; wet mount preparations are to be disposed of properly.

Hot Plates

1. Any solution placed on a hot plate should never be left unattended.
2. The temperature of hot plates should be monitored continuously with a thermometer.
3. Use care when working near hot plates, as they may be hot even after being turned off.

Microtome **CAUTION: This equipment utilizes *SHARP* knives and has moving parts!**

1. When the microtome is not in use, place the knife guard over the knife and engage the brake, the lever is located below the hand wheel.
2. Place cassettes in the cassette clamp using only the thumb and forefinger and keeping other fingers away from the knife!
3. Before removing a paraffin block from the microtome, the microtome wheel must be locked in position and the microtome blade guard must be up.

4. All scraps of paraffin must be cleaned from the microtome, microtome table, water bath and floor.
5. Microtome blades must be handled with extreme care and disposed of in designated sharps containers.
6. Microtomes must be covered when not in use.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all equipment and supplies not in immediate use in an organized manner.
3. Lab decorations (pictures, stickers) should not in general be placed in the laboratory setting.

9.3 Deep-Sea Biology Laboratory

Care must be used when handling any chemicals, specimens, or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory.

1. Work carefully and cautiously, using common sense and good judgment at all times.
2. Eating, drinking, and smoking are prohibited in the laboratory and in the laboratory space of a combined office/laboratory room.
3. Long hair must be tied back during laboratory work.
4. Open toed shoes are prohibited when working with any chemicals.
5. Identify the location of all exits from the laboratory and from the building.
6. Be familiar with the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
7. Report all injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind, no matter how minor, to Dr. Frank or Peggy Oellrich immediately.
8. Keep sinks free of paper or any debris that could interfere with drainage.
9. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use. Do not leave dirty glassware in the sink.

Sharp Objects and Broken Glass

1. Pointed dissection probes, scalpels, razor blades, scissors, and microtome knives must be used with great care, and covered when not in use
2. Containers designated for the disposal of sharps (scalpel blades, razor blades, needles; dissection pins, etc.) and containers designated for broken glass are present in the laboratory. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit is by the sink on your right as you enter the lab. It contains antiseptics, bandages, and Band-Aids to care for minor cuts.

NSU OCEANOGRAPHIC CENTER LABORATORY SAFETY PLAN

4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. Do not place broken glass in the regular trash.
5. When cutting with a razor blade, scalpel or other sharp instrument, forceps should be used to help hold the specimen. Never use fingers to hold the specimen while cutting.

Noxious Chemicals

1. Material Safety Data Sheets (MSDS) for every chemical in the lab are in the MSDS notebook on the bookshelf on your left as you enter the lab. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the PI of any spills immediately. Users should wear protective gloves when handling fixatives, decal, embedding solutions, and staining solutions.
3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets found next to the hood.
4. Xylenes and all fixatives must be used under the hood.

Preserved Specimens

1. Gloves should always be used when handling preserved samples.
2. Samples in any preservative other than ethanol are only to be handled inside the fume hood.
3. Notify the PI if there is a spill of preservative.
4. Scraps of the specimen are NOT to be disposed of in the sink but go into the waste container for the appropriate fixative/are placed in the hood to detoxify.
5. Specimens are to be clearly labeled and stored in designated containers.

Instruments and Equipment

Microscope Handling

1. When finished with the microscope, the microscope, camera, and any light sources must be turned off and the microscope cover replaced.
2. All stains, mounting solutions, etc. must be properly capped and any spillage cleaned up.

Hot Plates

1. Any solution placed on a hot plate should never be left unattended.
2. The temperature of hot plates should be monitored continuously with a thermometer.
3. Use care when working near hot plates, as they may be hot even after being turned off.

Microtome **CAUTION: This equipment utilizes *SHARP* knives and has moving parts!**

1. When the microtome is not in use, place the knife guard over the knife and engage the brake.
2. Place cassettes in the cassette clamp using only the thumb and forefinger and keeping other fingers away from the knife!
3. Before removing a paraffin block from the microtome, the microtome wheel must be locked in position and the microtome blade guard must be up.
4. All scraps of paraffin or plastic must be cleaned from the microtome, microtome table, water bath and floor.

5. Microtome blades must be handled with extreme care and disposed of in designated sharps containers.

Electrophysiological Equipment

1. Do not turn on any equipment that you have not been specifically trained in the use of.
2. Be sure that all the equipment is turned off when not in use.
3. Never leave the amplifier on when the electrodes are in air!
4. Be sure that the accessory fans are on when using any of the light sources. You can hear if the fan has turned on when the light is turned on. For the Instruments SA monochromator, the fan is external and needs to be plugged in separately
5. Never leave any of the light sources (monochromator or accessory) on when not running an experiment.
6. Do all animals preps on the back table away from the electronics.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all pipettors and boxes/containers not in immediate use in an organized manner.
3. Lab decorations (pictures, stickers) should not in general be placed in the laboratory setting.

9.4 Electron Microscopy Laboratory

Care must be used when handling any chemicals, specimens, or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory.

1. Work carefully and cautiously, using common sense and good judgment at all times.
2. EATING, DRINKING AND SMOKING ARE PROHIBITED in the laboratory and in the laboratory space of a combined office/laboratory room.
3. Long hair must be tied back during laboratory work.
4. Open toed shoes are prohibited.
5. No sleeveless tops or shorts are permitted. Legs and midriffs must be covered with protective clothing while working in the laboratory. Lab coats are required.
6. Identify the location of all exits from the laboratory and from the building.
7. Be familiar with the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
8. Report all injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind, no matter how minor, to the lab manager immediately.
9. Keep sinks free of paper or any debris that could interfere with drainage.
10. Lab benches must be clear of all items that are not necessary for the lab exercise.
11. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use. Do not leave glassware in the sink.

Sharp Objects and Broken Glass

1. Pointed dissection probes, scalpels, razor blades, scissors, and microtome knives must be used with great care, and placed in a safe position when not in use.
2. Containers designated for the disposal of sharps (scalpel blades, razor blades, needles; dissection pins, etc.) and containers designated for broken glass are present in the laboratory. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit contains antiseptics, bandages, and Band-Aids to care for minor cuts.
4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. Do not place broken glass in the regular trash.
5. When cutting with a razor blade, scalpel or other sharp instrument, forceps should be used to help hold the specimen. Never use fingers to hold the specimen while cutting.

Noxious Chemicals

1. Material Safety Data Sheets (MSDS) are available in lab. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the lab manager of any spills immediately. Users should wear protective gloves when handling fixatives, decal, embedding solutions, and staining solutions.
3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets.
4. Osmium Tetroxide and HMDS must be used under the hood
5. All fixatives (gluteraldehyde, etc.) must be used only under the hood.

Preserved Specimens

1. Gloves should always be used when handling preserved samples.
2. Samples in any preservative are only to be handled inside the fume hood.
3. Notify the lab manager if there is a spill of preservative.
4. Scraps of the specimen are NOT to be disposed of in the sink.
5. Specimens are to be clearly labeled and stored in designated containers.
6. Users are only permitted to conduct fixations during scheduled lab time and under the guidance of lab personnel.

Instruments and Equipment

Electron Microscope Operation

1. Electron Microscopes are used only when Dr. Blackwelder is present in the laboratory to oversee operation.
2. Students may observe samples and take micrographs. Dr. Blackwelder will adjust filament saturation.
3. The EM is turned on and off by Dr. Blackwelder.
4. If any difficulties arise while you are imaging notify Dr. Blackwelder immediately.
5. Do not touch any of the filament related controls.

Hot Plates

1. Any solution placed on a hot plate should never be left unattended.
2. The temperature of hot plates should be monitored continuously with a thermometer.
3. Use care when working near hot plates, as they may be hot even after being turned off.

Ultra Microtome ****CAUTION:** This equipment utilizes a very delicate DIAMOND knife which is expensive and can be easily damaged

1. When not in use the cover should be placed on the ultramicrotome.
2. Dr. Blackwelder should be in the laboratory while you are sectioning unless you have been personally approved by Dr. Blackwelder in writing to work with the microtome by yourself.
3. Trimming resin blocks with the single edged razors can result in injury if you are not careful. Be sure you are thoroughly checked out with trimming before attempting to do it by yourself.
4. In placing the block in the ultramicrotome chuck be sure not to over-tighten the block in the chuck. This could result in damage to the relatively soft metal.
5. When you place the knife in the chuck it should be slowly and incrementally advanced toward the block. Cutting off the block face with your knife can result in damage to the block and the diamond knife.
6. After you are done for the day be sure to carefully clean the knife, and all associated glassware used for staining. Be sure to leave the area neat upon completion.
7. Trimming razor blades must be handled with extreme care and disposed of in designated sharps containers.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all pipettors and boxes/containers not in immediate use in an organized manner.
3. Lab decorations (pictures, stickers) should not be placed in the laboratory setting.

9.5 Coral Hybridization Laboratory

Care must be used when handling any chemicals, specimens, or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory.

1. Work carefully and cautiously, using common sense and good judgment at all times.
2. EATING, DRINKING, AND SMOKING ARE PROHIBITED in the laboratory and in the laboratory space of a combined office/laboratory room.
3. Long hair must be tied back during laboratory work.
4. Open toed shoes are prohibited.
5. No sleeveless tops or shorts are permitted. Legs and midriffs must be covered with protective clothing while working in the laboratory. Lab coats are required.
6. Identify the location of all exits from the laboratory and from the building.
7. Be familiar with the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
8. Report all injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind, no matter how minor, to the lab manager immediately.

NSU OCEANOGRAPHIC CENTER LABORATORY SAFETY PLAN

9. Keep sinks free of paper or any debris that could interfere with drainage.
10. Lab benches must be clear of all items that are not necessary for the lab exercise.
11. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use. Do not leave glassware in the sink.

Sharp Objects and Broken Glass

1. Pointed dissection probes, scalpels, razor blades, scissors, and microtome knives must be used with great care, and placed in a safe position when not in use.
2. Containers designated for the disposal of sharps (scalpel blades, razor blades, needles; dissection pins, etc.) and containers designated for broken glass are present in the laboratory. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit contains antiseptics, bandages, and Band-Aids to care for minor cuts.
4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. Do not place broken glass in the regular trash.
5. When cutting with a razor blade, scalpel or other sharp instrument, forceps should be used to help hold the specimen. Never use fingers to hold the specimen while cutting.

Noxious Chemicals

1. Material Safety Data Sheets (MSDS) are available in lab. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the lab manager of any spills immediately. Users should wear protective gloves when handling fixatives, decal, embedding solutions, and staining solutions.
3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets.
4. Xylene must be used under the hood.
5. All fixatives (Z-fix, formaldehyde, gluteraldehyde, etc.) must be used only under the hood.
6. All solvents must be used only under the hood.

Preserved Specimens

1. Gloves should always be used when handling preserved samples.
2. Samples in any preservative are only to be handled inside the fume hood.
3. Notify the lab manager if there is a spill of preservative.
4. Scraps of the specimen are NOT to be disposed of in the sink.
5. Specimens are to be clearly labeled and stored in designated containers.
6. Users are only permitted to work on the preparation of histology slides (including infiltration and embedding, sectioning, and staining) during scheduled lab time and under the guidance of lab personnel.

Instruments and Equipment

Microscope Handling

1. Microscopes and microscope cameras must not be moved without consulting the lab manager.
2. Microscope must be positioned safely on the table, NOT near the edge.

NSU OCEANOGRAPHIC CENTER LABORATORY SAFETY PLAN

3. The coarse adjustment must NEVER be used to focus a specimen when the 40x or oil immersion lens is in place.
4. When finished with the microscope, the microscope, camera, and any light sources must be turned off and the microscope cover replaced.
5. All prepared microscope glass slides are to be returned to their appropriate slide trays; wet mount preparations are to be disposed of properly.

Hot Plates

1. Any solution placed on a hot plate should never be left unattended.
2. The temperature of hot plates should be monitored continuously with a thermometer.
3. Use care when working near hot plates, as they may be hot even after being turned off.

Rotary Evaporator

1. The Rotavap must be properly ventilated into the hood when evaporating noxious solvents (i.e., methanol, ethyl acetate, hexane).
2. The hotwater bath must be turned off when not in use.
3. All glassware must be inspected prior to each use to ensure there are no cracks or chips in the glass.
4. Only heavy walled vacuum flasks are to be used.
5. Only a shatter-proof collection bulb is to be used.
6. Check with the lab manager prior to evaporating any solvents other than water, methanol, ethyl acetate, or hexane.
7. The condenser should be at a temperature of 2°C or less prior to rotavap use.
8. All solvents must be properly exposed of.

Analytical Balance

1. Operator must be aware of the hazards of substance before weighing it.
2. During weighing the operator may be exposed to high concentrations of pure substances and therefore must consider the hazards at all times.
3. Hazardous materials must be weighed in the hood.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all pipettors and boxes/containers not in immediate use in an organized manner.
3. Lab decorations (pictures, stickers) should not in general be placed in the laboratory setting.

9.6 Invertebrate Laboratory

Care must be used when handling any chemicals, specimens, or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory.

NSU OCEANOGRAPHIC CENTER LABORATORY SAFETY PLAN

1. Work carefully and cautiously, using common sense and good judgment at all times.
2. EATING, DRINKING, AND SMOKING ARE PROHIBITED in the laboratory and in the laboratory space of a combined office/laboratory room.
3. Long hair must be tied back during laboratory work.
4. Open toed shoes are prohibited.
5. No sleeveless tops or shorts are permitted. Legs and midriffs must be covered with protective clothing while working in the laboratory. Lab coats are required.
6. Identify the location of all exits from the laboratory and from the building.
7. Be familiar with the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
8. Report all injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind, no matter how minor, to the lab manager immediately.
9. Keep sinks free of paper or any debris that could interfere with drainage.
10. Lab benches must be clear of all items that are not necessary for the lab exercise.
11. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use. Do not leave glassware in the sink.

Sharp Objects and Broken Glass

1. Pointed dissection probes, scalpels, razor blades, scissors, and any other sharp objects or instruments must be used with great care, and placed in a safe position when not in use.
2. The laboratory has containers designated for the disposal of sharps (e.g., scalpel blades, razor blades, needles; dissection pins) and containers designated for broken glass. Use them. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit contains antiseptics, bandages, and Band-Aids to care for minor cuts.
4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. Do not place broken glass in the regular trash.
5. When cutting with a razor blade, scalpel or other sharp instrument, forceps should be used to help hold the specimen. Never use fingers to hold the specimen while cutting.

Noxious Chemicals

1. Material Safety Data Sheets (MSDS) are available in lab. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the lab manager of any spills immediately. Users should wear protective gloves when handling fixatives, preservatives, and staining solutions.
3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets.
4. Fixatives (e.g., formaldehyde, glutaraldehyde) must be used only under the hood.

Preserved Specimens

1. Gloves should always be used when handling preserved samples.
2. Samples in fixative (e.g., formaldehyde, formalin, glutaraldehyde) must be handled only inside the fume hood.
3. Notify the lab manager if there is a spill of fixative or preservative.
4. Do NOT dispose of scraps of specimens in the sink.
5. Specimens must be clearly labeled and stored in designated containers.

6. Jars containing ethyl or isopropyl alcohol (all concentrations) must be placed in a plastic tray before opening and kept in one until returned to the appropriate storage shelf adjacent to the main laboratory room.
7. All specimens and slides must be placed in a glass or plastic dish or tray when removed from a jar, bag, or other container, not placed on the laboratory bench surface.

Instruments and Equipment

Microscope Handling

1. Microscopes and illuminators must be positioned safely on the table, NOT near the edge.
2. For compound microscopes, the coarse adjustment must NEVER be used to focus a specimen when the 40x or oil immersion lens is in place.
3. When finished with the microscope, the microscope, camera, and any light sources must be turned off and the microscope cover replaced.
4. All prepared microscope glass slides are to be returned to their appropriate slide boxes.
5. Temporary slide preparations must be disposed of properly, e.g., washing the contents of a wet mount into a labeled waste container and logged it on the disposal data sheets; disposing used cover slips in the sharps container.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all pipettors and boxes/containers not in immediate use in an organized manner.
3. Lab decorations (pictures, stickers) should not in general be placed in the laboratory setting.

9.7 Fisheries Laboratory

Knife Safety in the Work Environment (laboratory, fishing vessels, and tournaments)

Topics include proper lab attire when using knives and other sharp tools, benefits of a sharp blade, sharpening knife blades, hazards of dull blades, keeping body parts and co-workers away from blade paths, response to knife injuries and changing and disposing of utility knife blades.

PROPER ATTIRE IN LAB (General Guidelines)

- Approved safety goggles
- Shirt that covers the stomach and lower back as well as the upper arms. Do not wear tank tops, cropped shirts or mesh shirts
- Long pants (or a lab coat such that your knees are covered when you are sitting down).
- Shoes that completely cover the foot (sandals with socks is not allowed).
- Remove contact lenses.

IMPORTANCE OF A SHARP BLADE

- No matter what type of application you have or environment you are working in, keeping a sharp blade makes it easier to cut through material. This allows the worker to exert less effort and makes it easier to maintain good posture while keeping the blade under control.

SHARPENING & INSPECTING FIXED BLADE KNIVES

- Before using a knife, check for any signs of damage such as cracked or damaged handles. Make sure the connection between the blade and the handle is secure.
- While it is important to keep the blade sharp, knives should only be sharpened by a person properly trained and authorized by the company.

SIGNS & HAZARDS OF DULL BLADES

- Cutting with a dull blade causes us to apply more force and pressure to the blade in order to get it to cut. This can lead to a variety of unsafe situations such as 1) applying so much force that the blade bends or breaks; 2) a loss of balance when the blade slips free of the material; or 3) we become so focused on trying to make the cut that we quit paying attention to the path of blade travel, leading to an injury.
- Even with a sharp blade, applying too much pressure can be a source of injury. When cutting thick materials, make several passes, cutting a little bit each time rather than trying to cut through the material all at one time.

KEEPING BODY PARTS AWAY FROM BLADE'S PATH OF TRAVEL

- Maintain an awareness of where your body parts are located relative to the path the blade will travel.
- Before beginning any cutting motion, make sure your free hand is out of the way. This may seem easy when performing simple, slow-paced cutting tasks like opening boxes, but when faced with a fast-paced repetitive task, it takes deliberate concentration and effort to avoid injury.

PROTECTING CO-WORKERS FROM KNIFE INJURIES

- When using knives, keep in mind that your co-workers may inadvertently be in the path of blade travel.
- Under ideal conditions, co-workers should stay at least an arm's length away from an exposed blade to minimize the possibility of inadvertent contact; however, in many applications this is simply not possible.
- When using a knife in close proximity to others, it is critical to keep the blade under control and in close proximity to the material being cut.
- Avoid making large, sweeping cuts that may carry your blade into an aisle way or near a co-worker.
- When approaching a worker using a knife, make sure he or she is aware of your presence before entering the cutting area.

UTILITY KNIFE BLADES

- The blade on some utility knives may be scored to allow the dull section to be snapped off and a sharp edge to take its place. When performing this function, always wear safety glasses because the blade may fly away with enough force to cause an eye injury.
- Always use an assist device to snap the blade, such as a pair of pliers. Never use your hand or force the blade against a solid object.
- When disposing of a used blade, it must be disposed of in a safe manner. Don't just throw it in the trash; this places others at risk.
- The best place to dispose of a used blade is in a "sharps" container. These containers are designed to safely handle sharp objects.

OTHER KNIFE SAFETY TIPS

- Never attempt to cut an object when either you or the object is unstable.
- Where possible, place objects on a flat, stable surface before cutting. When this is not possible, at least make sure you have a stable stance and have a clear path of blade travel before cutting.
- To prevent these types of situations, always return a knife with a fixed blade to its sheath, scabbard or designated storage area as soon as you are finished cutting.
- Should you happen to drop a knife, never attempt to catch it. It's better to let it hit the floor than risk grabbing the blade.

RESPONDING TO KNIFE INJURIES

- Every cut does not cause major damage. In fact, most small cuts and nicks only cause superficial damage; however, even a minor cut must still be reported and treated properly.
- First aid for a minor cut includes washing with soap and water, then cleansing the wound with some type of antiseptic to kill germs.
- Because of the risk of illness spread by contact with human blood and other bodily fluids, any work area and knife blades contaminated by human blood must be properly disinfected. Simply wiping up the bloody area with a damp rag is not enough.
- A disinfecting solution must be used, which will kill germs and bacteria contained in human blood. A common choice is a mixture of bleach and water.

9.8 Physical Oceanography Laboratory

Care must be used when handling any chemicals or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory.

1. Work carefully and cautiously, using common sense and good judgment at all times.
2. EATING, DRINKING, AND SMOKING ARE PROHIBITED in the laboratory.
3. Long hair must be tied back during laboratory work.
4. Open toed shoes are prohibited.
5. No sleeveless tops or shorts are permitted. Legs and midriffs must be covered with protective clothing while working in the laboratory. Lab coats are required.
6. Identify the location of all exits from the laboratory and from the building.
7. Be familiar with the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
8. Report all injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind, no matter how minor, to the lab manager immediately.
9. Keep sinks free of paper or any debris that could interfere with drainage.
10. Lab benches must be clear of all items that are not necessary for the lab exercise.
11. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use. Do not leave glassware in the sink.

Sharp Objects and Broken Glass

1. Scalpels, razor blades, and scissors must be used with great care, and placed in a safe position when not in use.
2. Containers designated for the disposal of sharps and containers designated for broken glass are present in the laboratory. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit contains antiseptics, bandages, and Band-Aids to care for minor cuts.
4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. Do not place broken glass in the regular trash.
5. When cutting with a razor blade, scalpel or other sharp instrument, forceps should be used to help hold the specimen. Never use fingers to hold the specimen while cutting.

Noxious Chemicals

1. Material Safety Data Sheets (MSDS) are available in the lab. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the lab manager of any spills immediately. Users should wear protective gloves when handling fixatives, decal, embedding solutions, and staining solutions.
3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all pipettors and boxes/containers not in immediate use in an organized manner.
3. Lab decorations (e.g., pictures, stickers) should not in general be placed anywhere in the laboratory setting.

9.9 Molecular Microbiology Laboratory

Safety of all laboratory workers is of primary concern, and thus all working graduate and undergraduate students will be briefed and given a current copy of all standard operating procedures (SOP). Overall care must be used when handling any chemicals, specimens, or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory.

General procedures

1. Work carefully and cautiously, using common sense and good judgment at all times.
2. Identify the location of all exits from the laboratory and from the building.
3. Be familiar with the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
4. Report all significant injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind to the lab manager immediately.

NSU OCEANOGRAPHIC CENTER LABORATORY SAFETY PLAN

5. No food or drinks are allowed in the laboratory area.
6. Keep sinks free of paper or any debris that could interfere with drainage.
7. Lab benches must be clear of all items that are not necessary for the lab exercise.
8. All students will be trained in proper use of the environmental cold room and safety showers before using.

Microbiology procedures

1. Handling of all live microbial cultures will be performed under controlled conditions such as designated biological hoods for containment.
2. Following standard aseptic methods outlined in Sambrook's *Molecular Cloning Manual* (2001) and undergraduate manual *Microbiology: a Human Perspective* by Nestor, surfaces will be wiped with a 70% ethanol or isopropanol solution before and after each procedure involving microbial organisms.
3. Instruments will be sterilized with controlled flame from a bunsen burner, or with steam autoclaving.
4. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use. **Do not leave glassware in the sink overnight.**

Sharp Objects and Broken Glass

1. Pointed dissection probes, scalpels, razor blades and scissors must be used with great care, and placed in a safe position when not in use.
2. Containers designated for the disposal of sharps (scalpel blades, razor blades, needles; dissection pins, etc.) and containers designated for broken glass are present in the laboratory. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit contains antiseptics, bandages, and Band-Aids to care for minor cuts.
4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. **Do not place broken glass in the regular trash.**

Hazardous Chemicals

1. Material Safety Data Sheets (MSDS) are available in lab and should be read by all before using a specific chemical. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the lab manager/Principal Investigator of any noxious chemical spills immediately. Users should wear protective gloves when using noxious chemical (e.g. ethidium bromide, phenol).
3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets.
4. Acids/strong bases must be used under the hood, with gloves and goggles.

Preserved Biological Samples

1. Scraps of biological samples are NOT to be disposed in the sink.
2. All biological samples are to be clearly labeled and stored in designated containers and storage cabinets.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all pipettors and boxes/containers not in immediate use in an organized manner.
3. Lab decorations (e.g., pictures, stickers) should not in general be placed anywhere in the laboratory setting.

9.10 Systems Biology and Geology Laboratory

Care must be used when handling any chemicals, specimens, or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory.

1. Work carefully and cautiously, using common sense and good judgment at all times.
2. Eating, drinking, and smoking are prohibited in the laboratory and in the laboratory space of a combined office/laboratory room.
3. Long hair must be tied back during laboratory work.
4. Open toed shoes are prohibited.
5. No sleeveless tops or shorts are permitted. Legs and midriffs must be covered with protective clothing while working in the laboratory. Lab coats are required.
6. Identify the location of all exits from the laboratory and from the building.
7. Be familiar with the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
8. Report all injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind, no matter how minor, to the lab manager immediately.
9. Keep sinks free of paper or any debris that could interfere with drainage.
10. Lab benches must be clear of all items that are not necessary for the lab exercise.
11. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use. Do not leave glassware in the sink.

Sharp Objects and Broken Glass

1. Pointed dissection probes, scalpels, razor blades, scissors, and knives must be used with great care, and placed in a safe position when not in use.
2. Containers designated for the disposal of sharps (scalpel blades, razor blades, needles; dissection pins, etc.) and containers designated for broken glass are present in the laboratory. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit contains antiseptics, bandages, and Band-Aids to care for minor cuts.
4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. Do not place broken glass in the regular trash.
5. When cutting with a razor blade, scalpel or other sharp instrument, forceps should be used to help hold the specimen. Never use fingers to hold the specimen while cutting.

Noxious Chemicals

1. Material Safety Data Sheets (MSDS) are available in lab. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the lab manager of any noxious chemical spills immediately. Users should wear protective gloves when using noxious chemicals (e.g. ethidium bromide).
3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets.
4. Acids must be used under the hood.

Coral/Sediment Samples and Specimens

1. All samples and specimens must be stored in a safe an orderly manner that does not interfere with personal workspaces.
2. Open lab-bench areas may be used for temporary placement of samples/specimens however they cannot remain for prolonged periods of time. If this would disrupt lab work by limiting the available lab space, sample/specimens should be promptly stored.
3. Some sediment samples that require a bleaching phase should be processed under the fume hood while it is in operation. Gloves should be worn when working with bleach and solutions should be properly disposed of.
4. **WARNING:** large coral specimens and sediment samples can be sharp and heavy, therefore gloves should be worn and caution should be taken when transporting and handling them.

Instruments and Equipment

Oven for Sediment Drying

1. The oven is to be operated only by those who have the permission of the lab manager and who have been properly trained to operate it.
2. Oven mitts must be worn when transferring samples to and from the oven.
3. Only sediment samples are to be placed in this oven, and samples/oven must be checked within 24 hours of operation.
4. The oven should never be operating if there are no sediment samples in it.
5. The temperature of the oven should **never exceed 70 degrees C**. The current temperature is digitally displayed on the oven door while in operation.
6. The oven should not be used over the weekends unless it is supervised by the operator.

Camsizer Sediment Counter and Computer

1. The Camsizer and its' associated computer are to be operated only by those who have the permission of the lab manager and who have been properly trained to operate it.
2. **WARNING:** The Camsizer is an expensive and delicate machine that is dependent on a calibration process for accurate processing results. This area is to be kept clear at all times and caution must be taken when in its' vicinity. Do not bump, rattle, or otherwise disturb the machine and the bench it rests on.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.

2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all equipment and supplies not in immediate use in an organized manner.

9.11 Sclerochronology Laboratory

Care must be used when handling any chemicals or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory.

1. Work carefully and cautiously, using common sense and good judgment at all times.
2. EATING, DRINKING, AND SMOKING ARE PROHIBITED in the laboratory.
3. Long hair must be tied back during laboratory work.
4. Open toed shoes are prohibited.
5. No sleeveless tops or shorts are permitted. Legs and midribs must be covered with protective clothing while working in the laboratory. Lab coats are required.
6. Identify the location of all exits from the laboratory and from the building.
7. Be familiar with the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
8. Report all injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind, no matter how minor, to the lab manager immediately.
9. Keep sinks free of paper or any debris that could interfere with drainage.
10. Lab benches must be clear of all items that are not necessary for the lab exercise.
11. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use. Do not leave glassware in the sink.

Sharp Objects and Broken Glass

1. Scalpels, razor blades, and scissors must be used with great care, and placed in a safe position when not in use.
2. Containers designated for the disposal of sharps and containers designated for broken glass are present in the laboratory. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit contains antiseptics, bandages, and Band-Aids to care for minor cuts.
4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. Do not place broken glass in the regular trash.
5. When cutting with a razor blade, scalpel or other sharp instrument, forceps should be used to help hold the specimen. Never use fingers to hold the specimen while cutting.

Noxious Chemicals

1. Material Safety Data Sheets (MSDS) are available in the lab. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the lab manager of any spills immediately. Users should wear protective gloves when handling fixatives, decal, embedding solutions, and staining solutions.
3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets.

X-radiography

The X-ray machine should only be used after training by the PI or designated responsible users.

Rock Saws

Rock saws and cutting and polishing equipment should only be used after training by the PI or designated responsible users.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all equipment, supplies, and boxes/containers not in immediate use in an organized manner.
3. Lab decorations (pictures, stickers) should not in general be placed in the laboratory setting.

9.12 Ichthyology Laboratory

Care must be used when handling any chemicals, specimens, or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory. This laboratory is routinely involved in varying often diverse research. Lab personnel must be familiar with protocols outside their own interest to insure their safety, avoid damaging equipment, and not impact the research projects of others.

In General

1. THINK. Work carefully using common sense and good judgment at all times.
2. Keep your work area and the lab in general clean.
3. Report any damaged equipment to the lab manager so that it may be repaired or replaced.
4. Eating and drinking are prohibited in the laboratory.
5. No food or drink is to be stored in the lab refrigerator.
6. Long hair must be tied back during laboratory work.
7. Open toed shoes are prohibited during laboratory work..
8. No sleeveless tops or shorts are permitted and legs and midriffs must be covered with protective clothing during laboratory work. Lab coats are required.
9. Know the location of all exits from the laboratory and from the building.
10. Know the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
11. Report all injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind, no matter how minor, to the lab manager immediately.
12. Keep sinks free of paper or any debris that could interfere with drainage.
13. Lab benches must be clear of all items that are not necessary for the lab exercise.
14. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use. Do not leave glassware in the sink.

15. The last person to leave the lab, at any time, must insure that all equipment, gases, and fluids, not specifically required to be on, are turned off before leaving the lab.

Sharp Objects and Broken Glass

1. Pointed dissection probes, scalpels, razor blades, scissors, and microtome knives must be used with great care, and placed in a safe position when not in use.
2. Containers designated for the disposal of sharps (scalpel blades, razor blades, needles; dissection pins, etc.) and containers designated for broken glass are present in the laboratory. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit contains antiseptics, bandages, and Band-Aids to care for minor cuts.
4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. Do not place broken glass in the regular trash.
5. When cutting with a razor blade, scalpel or other sharp instrument, forceps should be used to help hold the specimen. Never use fingers to hold the specimen while cutting.
6. Much of the fine dissection instruments are extremely delicate and expensive. Always use the appropriate tool for the specific dissection.

Noxious Chemicals

1. Material Safety Data Sheets (MSDS) are available in lab. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the lab manager of any spills immediately. Users should wear protective gloves when handling fixatives, decal, embedding solutions, and staining solutions.
3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets.
4. Xylene must be used under the hood.
5. All fixatives (Z-fix, formaldehyde, gluteraldehyde, etc.) and most perfusion media must be used only under the hood.
6. If in doubt, use the hood!

Preserved Specimens

1. Gloves should always be used when handling preserved samples.
2. Samples in any preservative are only to be handled inside the fume hood.
3. Specimens are to be clearly labeled, as to type and responsible individual, and stored in designated containers.
4. Users are only permitted to work on the preparation of histology slides (including infiltration and embedding, sectioning, and staining) during scheduled lab time and under the guidance of lab personnel.

Instruments and Equipment

Microscope Handling

1. Microscopes and microscope cameras must not be moved without consulting the lab manager.
2. Microscope must be positioned safely on the table, NOT near the edge.
3. The coarse adjustment must NEVER be used to focus a specimen when the 40x or oil immersion lens is in place.

4. When finished with the microscope, the microscope, camera, and any light sources must be turned off and the microscope cover replaced.

Hot Plates

1. Any solution placed on a hot plate should never be left unattended.
2. The temperature of hot plates should be monitored continuously with a thermometer.
3. Use care when working near hot plates, as they may be hot even after being turned off.

Microtome **CAUTION: This equipment utilizes *SHARP* knives and has moving parts!**

1. When the microtome is not in use, place the knife guard over the knife and engage the brake, the lever is located below the hand wheel.
2. Place cassettes in the cassette clamp using only the thumb and forefinger and keeping other fingers away from the knife!
3. Before removing a paraffin block from the microtome, the microtome wheel must be locked in position and the microtome blade guard must be up.
4. All scraps of paraffin must be cleaned from the microtome, microtome table, water bath and floor.
5. Microtome blades must be handled with extreme care and disposed of in designated sharps containers.
6. Microtomes must be covered when not in use.

Micromanipulators and Perfusion Pumps

Must be treated with respect; these are delicate instruments and must be handled as such.

Centrifuges, Lyophilizer, etc.

Read the Directions before use of any electronic equipment.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all pipettors and boxes/containers not in immediate use in an organized manner.
3. Lab decorations (pictures, stickers) should not in general be placed in the laboratory setting.

9.13 Plankton/Stable Isotope Laboratory

Care must be used when handling any chemicals, specimens, or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory.

1. Work carefully and cautiously, using common sense and good judgment at all times.
2. EATING. DRINKING AND SMOKING ARE PROHIBITED in the laboratory and in the laboratory space of a combined office/laboratory room.

NSU OCEANOGRAPHIC CENTER LABORATORY SAFETY PLAN

3. Long hair must be tied back during laboratory work.
4. Open toed shoes are prohibited.
5. No sleeveless tops or shorts are permitted. Legs and midriffs must be covered with protective clothing while working in the laboratory. Lab coats are required.
6. Identify the location of all exits from the laboratory and from the building.
7. Be familiar with the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
8. Report all injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind, no matter how minor, to the lab manager immediately.
9. Keep sinks free of paper or any debris that could interfere with drainage.
10. Lab benches must be clear of all items that are not necessary for the lab exercise.
11. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use. Do not leave glassware in the sink.

Sharp Objects and Broken Glass

1. Pointed dissection probes, scalpels, razor blades, scissors, Dremels, and any other sharp objects or instruments must be used with great care, and placed in a safe position when not in use.
2. The laboratory has containers designated for the disposal of sharps (e.g., scalpel blades, razor blades, needles; dissection pins) and containers designated for broken glass. Use them. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit contains antiseptics, bandages, and Band-Aids to care for minor cuts.
4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. Do not place broken glass in the regular trash.
5. When cutting with a razor blade, scalpel or other sharp instrument, forceps or pliers should be used to help hold the specimen. Never use fingers to hold the specimen while cutting.

Noxious Chemicals

1. Material Safety Data Sheets (MSDS) are available in lab. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the lab manager of any spills immediately. Users should wear protective gloves when handling fixatives, preservatives, and chemical solutions.
3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets.
4. Fixatives (e.g., formaldehyde) and all chemicals must be used only under the fume hood.

Preserved Biological Samples

1. Gloves should always be used when handling preserved samples.
2. Samples in fixative (e.g., formaldehyde, formalin) must be handled only inside the fume hood.
3. Notify the lab manager if there is a spill of fixative or preservative.
4. Do NOT dispose of scraps of specimens in the sink.
5. Specimens must be clearly labeled and stored in designated containers and storage cabinets.

6. Jars/bottles containing ethyl or isopropyl alcohol (all concentrations) must be placed in a plastic tray before opening and kept in one until returned to the appropriate storage shelf adjacent to the main laboratory room.
7. All specimens must be placed in a glass or plastic dish or tray when removed from a jar, bag, or other container, not placed on the laboratory bench surface.

Instruments and Equipment

1. Microscopes and illuminators must be positioned safely on the table, NOT near the edge.
2. Magnifying lens and filters for all dissecting microscopes must be stored in designated containers when not in use.
3. When finished, the microscope, camera, and all light sources must be turned off and the microscope cover replaced.
4. All prepared microscope glass slides are to be returned to their appropriate slide boxes.
5. Temporary slide preparations must be disposed of properly, e.g., washing the contents of a wet mount into a labeled waste container and logged it on the disposal data sheets; dispose used cover slips in the sharps container.
6. Folsom plankton splitter will be rinsed with freshwater after each use and left to air dry.
7. Dremels will be cleaned and replaced in storage containers.
8. Wig-L-Bugs (amalgamators) and vessels will be damp wiped/washed and air dried.
9. All multi-cell trays will be washed and air dried after use.
10. While the heat block is in use, it will be monitored continually.

Analytical Balance

1. Operator must be aware of the substance before weighing it.
2. Do not use excess force on the weigh plate of the scale while weighing samples.
3. Open/close scale for each sample.
4. Clean any spilled samples or standards in the scale immediately.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all pipettors and boxes/containers not in immediate use in an organized manner.
3. Lab decorations (pictures, stickers) should not in general be placed in the laboratory setting.

9.14 Chemistry Preparation Laboratory

Care must be used when handling any chemicals or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory.

1. Work carefully and cautiously, using common sense and good judgment at all times.

2. EATING, DRINKING, AND SMOKING ARE PROHIBITED in the laboratory and in the laboratory space of a combined office/laboratory room.
3. Open toed shoes are prohibited.
4. No sleeveless tops or shorts are permitted. Legs and midriffs must be covered with protective clothing while working in the laboratory. Lab coats are required.
5. Identify the location of all exits from the laboratory and from the building.
6. Be familiar with the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
7. Report all injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind, no matter how minor, to the lab manager immediately.
8. Keep sinks free of paper or any debris that could interfere with drainage.
9. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use.

Sharp Objects and Broken Glass

1. Pointed dissection probes, scalpels, razor blades, scissors, and any other sharp objects or instruments must be used with great care, and placed in a safe position when not in use.
2. The laboratory has containers designated for the disposal of sharps (e.g., scalpel blades, razor blades, needles; dissection pins) and containers designated for broken glass. Use them. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit contains antiseptics, bandages, and Band-Aids to care for minor cuts.
4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. Do not place broken glass in the regular trash.
5. When cutting with a razor blade, scalpel or other sharp instrument, forceps should be used to help hold the specimen. Never use fingers to hold the specimen while cutting.

Noxious Chemicals

1. Material Safety Data Sheets (MSDS) are available in lab. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the lab manager of any spills immediately. Users should wear protective gloves when handling fixatives, preservatives, and staining solutions.
3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets.
4. Concentrated mineral acids and ammonium hydroxide must be used only under the hood.

Hot Plates

1. Any solution placed on a hot plate should never be left unattended.
2. The temperature of hot plates should be monitored continuously with a thermometer.
3. Use care when working near hot plates, as they may be hot even after being turned off.

Fire Prevention

1. **No open flames** are to be used in the laboratory without the express authorization by the lab manager.
2. Be constantly on the alert for odors possibly indicating an electrical fire or short circuits.

3. Immediately unplug any equipment that emits such an odor or delivers any electrical shock. Tag the equipment and report the incident immediately to the lab manager.
4. Know the location of the fire extinguisher and how to use it.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all equipment and supplies not in immediate use in an organized manner.
3. Lab decorations (pictures, stickers) should not in general be placed in the laboratory setting.

9.15 Amphipod Laboratory

Care must always be used when handling any chemicals, specimens, or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory. Most of the optical equipment in the amphipod lab is privately owned and not the property of NSU. Therefore, permission and training are required before using any of the equipment in the lab.

1. Work carefully and cautiously, using common sense and good judgment at all times.
2. Long hair must be tied back during laboratory work.
3. Identify the location of all exits from the laboratory and from the building.
4. Be familiar with the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
5. Report all injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind, no matter how minor, to the lab manager immediately.
6. Keep sinks free of paper or any debris that could interfere with drainage.
7. Lab benches should be kept clear of all items that are not necessary for work at hand.
8. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use. All glassware must be washed and set out to dry before leaving the lab.

Sharp Objects and Broken Glass

1. Pointed dissection probes, scalpels, razor blades, scissors, and any other sharp objects or instruments must be used with great care, and placed in a safe position when not in use.
2. The laboratory has containers designated for the disposal of sharps (e.g., scalpel blades, razor blades, needles; dissection pins) and containers designated for broken glass. Use them. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit contains antiseptics, bandages, and Band-Aids to care for minor cuts.
4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. Do not place broken glass in the regular trash.
5. When cutting with a razor blade, scalpel or other sharp instrument, forceps should be used to help hold the specimen. Never use fingers to hold the specimen while cutting.

Noxious Chemicals

1. Material Safety Data Sheets (MSDS) are available in lab. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the lab manager of any spills immediately. Users should wear protective gloves when handling fixatives, preservatives, and staining solutions.
3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets.
4. Fixatives (e.g., formaldehyde, glutaraldehyde) must be used only under the hood if available.

Preserved Specimens

1. Gloves (nitrile) are recommended when handling preserved samples.
2. Samples in fixative (e.g., formaldehyde, formalin, glutaraldehyde) should be handled only inside the fume hood if one is present.
3. Notify the lab manager if there is a spill of fixative or preservative.
4. Do NOT dispose of scraps of specimens in the sink.
5. Specimens must be clearly labeled and stored in designated containers.
6. Jars containing ethyl or isopropyl alcohol (all concentrations) must be placed in a plastic tray before opening and kept in one until returned to the appropriate storage shelf adjacent to the main laboratory room.
7. All specimens and slides must be placed in a glass or plastic dish or tray when removed from a jar, bag, or other container, not placed on the laboratory bench surface.

Instruments and Equipment

Microscope Handling

1. Microscopes and illuminators must be positioned safely on the table, NOT near the edge.
2. Always turn illuminators to lowest setting before powering off. DO NOT power off in a high illumination setting.
3. For compound microscopes, the coarse adjustment must NEVER be used to focus a specimen when the 40x or oil immersion lens is in place.
4. When finished with the microscope, the microscope, camera, and any light sources must be turned off and the microscope cover replaced.
5. All prepared microscope glass slides are to be returned to their appropriate slide boxes.
6. Temporary slide preparations must be disposed of properly, e.g., washing the contents of a wet mount into a labeled waste container and logging it on the disposal data sheets; disposing used cover slips in the sharps container.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all pipettors and boxes/containers not in immediate use in an organized manner.
3. Lab decorations (pictures, stickers) should not in general be placed in the laboratory setting.

9.16 Coral Computer Analysis and GIS Laboratory and Student Computer Laboratories

The computing resources of Nova Southeastern University are intended to be used for its programs of instruction and research and to conduct the legitimate business of the University. All users must have proper authorization for the use of the University's computing resources. Users are responsible for seeing that these computing resources are used in an effective, ethical, and legal manner. Users must apply standards of normal academic and professional ethics and considerate conduct to their use of the University's computing resources. Users must be aware of the legal and moral responsibility for ethical conduct in the use of computing resources. Users have a responsibility not to abuse the network and resources, and to respect the privacy, copyrights, and intellectual property rights of others.

Usage Policy

Policy violations generally fall into five categories that involve the use of computing resources:

1. for purposes other than the University's programs of instruction and research and the legitimate business of the University
2. to harass, threaten or otherwise cause harm to specific individuals or classes of individuals
3. to impede, interfere with, impair, or otherwise cause harm to the activities of others
4. to download, post or install to University computers, or transport across University networks, material that is illegal, proprietary, in violation of license agreements, in violation of copyrights, in violation of University contracts, or otherwise damaging to the institution
5. to recklessly or maliciously interfere with or damage computer or network resources or computer data, files, or other information

Inappropriate conduct and violations of this policy will be addressed by the appropriate procedures and agents (e.g., the Office of the Dean, the Office of the Vice President for Academic Affairs, or the Office of Human Resources) depending on the individual's affiliation to the University. In cases where a user violates any of the terms of this policy, the University may, in addition to other remedies, temporarily or permanently deny access to any and all NSU computing resources, and appropriate disciplinary actions may be taken, up to and including dismissal.

Personal Safety

1. Do not run inside the computer lab.
2. Take a note of all the exits in the room, and also take note of the location of fire extinguishers in the room for the sake of fire safety.
3. Keep bags and coats in the designated area, as they can cause people to trip if they are simply lying around the room.
4. Do not type continuously for extremely long periods.
5. Look away from the screen once in a while to give your eyes a rest.
6. Do not touch any exposed wires or sockets.
7. Avoid making loud noises and speaking loudly.

8. Do not attempt to open any machines, and do not touch the backs of machines when they are switched on.
9. Do not spill water or any other liquid on the machine, in order to maintain electrical safety.

Protecting Equipment

The laboratory equipment that is present inside a computer lab is very expensive, and it is the user's responsibility to ensure that this equipment is kept safe and sound.

1. Do not bring any food or drinks near the machine.
2. Turn off the machine you were using, when you are done using it.
3. Do not access external devices without scanning them for computer viruses.
4. Ensure that the temperature in the room stays cool, since there are a lot of machines inside a lab, and these can overheat easily. This is one of the many ways of ensuring computer safety.
5. Do not touch any of the circuit boards and power sockets when something is connected to them and switched on.
6. Always maintain an extra copy of all your important data.
7. Dust can affect computers adversely. Ensure that the machines are cleaned on a regular basis.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all pipettors and boxes/containers not in immediate use in an organized manner.
3. Lab decorations (pictures, stickers) should not in general be placed in the laboratory setting.

9.17 Compressed Gas Cylinders for Scuba Diving and Scuba Fill Station

Compressed gas cylinders are used at Nova Southeastern University Oceanographic Center for diving operations. Personnel using compressed gas cylinders must be trained in the safe use, storage, and transportation of high-pressure cylinders. Compressed gas cylinders can be potentially hazardous due to the pressures of the contents, the contents themselves, and/or a sudden and uncontrolled release of contents resulting in a missile/projectile hazard.

Requirements

1. All cylinders shall be tested and inspected per the time periods set forth in 49 CFR 173.34. All cylinders will have the required labeling and proper fittings for their use. Cylinders must be labeled as to their contents; cylinder color is not a reliable indication of contents. Scuba cylinders shall be inspected as outlined herein and in the University Standards for Scientific Diving Certification and Operation of Scientific Diving Programs.

NSU OCEANOGRAPHIC CENTER LABORATORY SAFETY PLAN

2. Personnel using the cylinders shall understand the hazards of the gas being used. The system with which the gas cylinder is to be used must be compatible with the gas. Incorrect matching can result in leaks, explosion, or fire. Personnel should reference the MSDS.
3. At scuba charging stations cylinders may be nested/secured using the three-point method established by the Compressed Gas Association.
4. When not in use cylinder valves will be shut. Cylinders with valve caps will be stored and transported with caps in place.
5. Staff will normally perform cylinder transportation. When transporting cylinders in a vehicle, two requirements must be met:
 - a. Cylinders should not be carried in the passenger compartment.
 - b. Cylinders must be adequately secured to prevent shifting which could result in damage to the cylinder and create a potential missile/projectile hazard.

Responsibilities

1. Supervisors shall ensure that their employees obtain the required training.
2. Employees shall abide by the requirements outlined in this policy.
3. The Nova Southeastern University Diving Safety Officer (DSO) will conduct training on use of scuba cylinders and the scuba charging system.

Compressed Gas Cylinders for Scuba Diving

Cylinders used for scuba diving shall be designed and approved for use in scuba diving activities. Individuals working with cylinders shall be able to recognize and identify different cylinder types (i.e. aluminum, steel, other) and locate and understand cylinder markings including but not limited to: DOT material codes, working pressure limits, manufacturer serial numbers, and hydrostatic test dates.

1. Valve Types
 - a. Individuals shall be able to recognize and identify different valve types and their uses including but not limited to: K-valves, J-valves, and Y-valves. Individuals will also be trained to distinguish between yoke valves and DIN valves.
2. Potential Hazards
 - a. Individuals shall understand the potential hazards of working with high pressure scuba cylinders and the compressed gases they contain. Potential hazards include but may not be limited to: impact/crush injuries from falling or rolling cylinders, injection injuries from escaping contents, traumatic injuries from catastrophic failure of cylinders/valves, and asphyxiation hazards from contents.
3. Use, Transport, and Storage: Individuals shall understand proper techniques for use, transport, and storage of scuba cylinders. Such measures include:
 - a. Use
 - Scuba tanks are only to be used for scuba diving and/or related underwater activities (i.e. suction sampling) and should not be used for other purposes.
 - b. Transport
 - When transporting/moving by hand, scuba cylinders shall be held by the valve in a manner which prevents both accidental activation of the valve and potential injection injury to the hand. If carried on the shoulder, manual contact with the valve shall be maintained. Cylinders shall not be carried without maintaining positive contact with the valve (i.e. cradling, 'stirruping').

- When transporting by vehicle, scuba cylinders shall be blocked or otherwise secured to prevent shifting. Scuba cylinders containing a non-breathable gas (i.e. Argon) should not be transported in the passenger compartment.
- c. Storage
- When stored, scuba cylinders shall be secured from falling. Cylinders may be secured by lashing or chaining the cylinder to a fixed surface, or placing the cylinder in an approved free standing rack designed for this purpose (i.e. “Pelican” rack). Cylinders in a gas manufacturing/compressor area may be secured using the CGA 3-point nesting method.
 - When temporarily staging cylinders for use, as on a dock, cylinders shall be either secured from falling, as above, or placed in a horizontal position and blocked to prevent rolling. At no time shall individual cylinders be left free-standing.
 - When storing for long periods of time, cylinders shall be secured from falling as all others. Cylinders should be stored away from extreme temperatures and contain a moderate amount of pressurized gas (~1000psi) to minimize stress on cylinder components and prevent internal contamination and/or corrosion.

Compressor System and Breathing Gases

The Oceanographic Center maintains an on-site air station comprised of a high pressure air compressor and cascade storage system for use in filling gas cylinders used in scuba diving operations. Requirements for gas compressor systems are specified in the University Standards for Scientific Diving Certification and Operation of Scientific Diving Programs (Sec 3.43, 3.44, 3.52) and reflect the minimum standards set forth by the American Academy of Underwater Sciences (AAUS).

1. Compressor Systems

The following will be considered in design and location of compressor systems:

- a. Low pressure compressors used to supply air to the diver if equipped with a volume tank shall have a check valve on the inlet side, a relief valve, and a drain valve.
- b. Compressed air systems over 500 psig shall have slow-opening shut-off valves.
- c. All air compressor intakes shall be located away from areas containing exhaust or other contaminants.

2. Oxygen Systems

- a. Equipment used with oxygen or mixtures containing over forty percent (40%) by volume oxygen shall be designed and maintained for oxygen service.
- b. Components exposed to oxygen or mixtures containing over forty percent (40%) by volume oxygen shall be cleaned of flammable materials before being placed into service.
- c. Oxygen systems over 125 psig shall have slow-opening shut-off valves.

3. Compressor Operation and Air Test Records

- a. Gas analyses and air tests shall be performed on each University controlled breathing air compressor at regular intervals of no more than 100 hours of operation or six months, whichever occurs first. The results of these tests shall be entered in a formal log and be maintained.
- b. A log shall be maintained showing operation, repair, overhaul, filter maintenance, and temperature adjustment for each compressor.

4. Requirements for Breathing Gases

Requirements for breathing gases are specified in the University Standards for Scientific Diving Certification and Operation of Scientific Diving Programs (Sec. 3.6) and reflect the minimum standards set forth by the American Academy of Underwater Sciences (AAUS).

- a. Air Quality: Breathing air for scuba shall meet the following specifications as set forth by the Compressed Gas Association (CGA Pamphlet G-7.1) and referenced in OSHA 29 CFR 1910.134

CGA Grade E	
Component	Maximum
Oxygen	20 - 22%/v
Carbon Monoxide	10 PPM/v
Carbon Dioxide	1000 PPM/v
Condensed Hydrocarbons	5 mg/m ³
Total Hydrocarbons as Methane	25 PPM/v
Water Vapor ppm	(2)
Objectionable Odors	None

- b. Air Testing: Air quality testing at NSU is performed by an outside contractor.
- c. Other Facilities: Compressed breathing gases obtained from non NSU facilities must meet or exceed standards.

5. Charging/Filling

Individuals shall understand the inspection requirements for scuba cylinders and ensure all requirements are met prior to charging/filling and/or use. Compressed gas cylinders used in scuba diving shall comply with the following inspection requirements:

- Designed, constructed, and maintained in accordance with the applicable provisions of the Unfired Pressure Vessel Safety Orders.
- Free from dings, dents, gouges, external corrosion or other visible damage.
- Hydrostatically tested in accordance with DOT standards.
- Have a visual internal inspection at intervals not to exceed twelve months.
- Valves shall be functionally tested at intervals not to exceed twelve months.

a. Cascade Storage System

Individuals charging/filling scuba cylinders with the cascade storage system shall be properly trained. Charging/filling equipment may be used only with cylinders approved for use in scuba diving related activities and only with gases approved by the University Diving Control Board. Individuals using the cascade storage system shall comply with the following:

- Be present at all times when cylinders are being charged/filled.
- Not exceed a charging/filling rate of 200-400 psi/minute.
- Maintain accurate and appropriate system records (i.e. Cascade Log).
- Report any problems or concerns to the Diving Safety Officer.

b. Compressor System

Individuals using the compressor system to charge either the cascade storage system or individual scuba cylinders shall be properly trained. Compressor equipment may be used only with the installed cascade storage system or cylinders approved for use

in scuba diving related activities, and only with gases approved by the University Diving Control Board. Individuals using the compressor system shall comply with the following:

- Follow proper procedures for compressor system inspection.
- Understand additional hazards posed by compressor system equipment.
- Insure intake air quality is not compromised by any automotive or other exhaust producing machinery located adjacent to Dive and Field Staging Building.
- Wear designated hearing protection equipment while compressor is in operation.
- Maintain accurate and appropriate system records (i.e. Compressor Log, Cascade Log)
- Report any problems or concerns to the Diving Safety Officer.

9.18 Communal Seawater and Coral Restoration Laboratories

The indoor seawater wet laboratories are supplied with clean seawater via a redundant well and filtration system, and piped into the lab with multiple taps available to supply clean seawater at the turn of a valve. The available space includes both open floor space and tank racks so that each researcher can set up equipment to fulfill their own individual needs. A fume hood and acid storage cabinet is available in the laboratory for shared usage.

General Procedures for Laboratory Usage

1. IACUC approval is needed for all vertebrate animal work.
2. Training is necessary for use of the facility and to teach the personnel doing wet lab work about the operational requirements of the facility. The training will help ensure the facility is not damaged by user error, but also ensures lab personnel will be able to fully function within the laboratory to get your research needs met.
3. Guidance and basic help for set up is available from the lab manager.
4. All aquaria, filtration, aeration, lighting and other related equipment and supplies are supplied and maintained by individual researchers.
5. Wood items, such as used for tank stands or work benches, need to be sealed.
6. As these facilities are often shared with other researchers, please keep things clean and avoid sprawling equipment, supplies and such outside your assigned area. Avoiding clutter also helps your research area pass routine IACUC inspections.
7. When done with the laboratory, the area needs to be left clean. Any problems with lab related equipment should be brought to the immediate attention of the building manager.

Seawater Supply

1. Seawater is supplied to the indoor laboratories from the building clean seawater system, which consists of a 5000 gallon holding tank and a 700 gallon gravity feed tank. Raw seawater must be batch processed for 24 hours minimum before being manually transferred to the clean seawater system. Thus, there is a finite volume of clean seawater available over a given time period.
2. Due to the finite volume of clean seawater available, systems are to be maintained as closed recirculating aquaria or very low-volume flow through systems. For more information please see the lab manager.

Wet Laboratory Safety

Care must be used when handling any chemicals, specimens, or equipment in the laboratory. Users are responsible for being familiar with and following correct safety practices while working in the laboratory.

1. Work carefully and cautiously, using common sense and good judgment at all times
2. **Seawater is an excellent conductor of electricity.** Extreme caution must be used when working with aquaria in proximity to sources of electricity such as aquarium pumps, lighting, heaters, etc.
3. Wet floors are inevitable and represent a significant slip and fall hazard. Extreme caution must be used when working when the floors may be wet.
4. Spilled water and seawater must be cleaned up immediately by mopping or squeejng into the floor drains.
5. EATING, DRINKING AND SMOKING ARE PROHIBITED in the laboratory and in the laboratory space of a combined office/laboratory room.
6. Long hair must be tied back during laboratory work.
7. Open toed shoes are prohibited.
8. No sleeveless tops or shorts are permitted. Legs and midriffs must be covered with protective clothing while working in the laboratory. Lab coats are required.
9. Be familiar with the location and proper use of fire extinguishers, fire blankets, first aid kits, spill response kits, and eye wash stations in each laboratory.
10. Report all injuries, spills, breakage of glass or other items, unsafe conditions, and accidents of any kind, no matter how minor, to the lab manager immediately.
11. Keep floor drains and sinks free of paper or any debris that could interfere with drainage.
12. Lab benches must be clear of all items that are not necessary for the lab exercise.
13. Wash hands and laboratory equipment/vessels with the appropriate cleaning agents after every use. Do not leave glassware in the sink.

Sharp Objects and Broken Glass

1. Pointed dissection probes, scalpels, razor blades, and scissors must be used with great care, and placed in a safe position when not in use.
2. Containers designated for the disposal of sharps (scalpel blades, razor blades, needles; dissection pins, etc.) and containers designated for broken glass are present in the laboratory. Never dispose of any sharp object in the regular trash containers.
3. The first aid kit contains antiseptics, bandages, and Band-Aids to care for minor cuts.
4. Do not touch broken glass with bare hands. Put on gloves and use a broom and dustpan to clean up glass. Dispose of ALL broken glass in the sharps container. Do not place broken glass in the regular trash.
5. When cutting with a razor blade, scalpel or other sharp instrument, forceps should be used to help hold the specimen. Never use fingers to hold the specimen while cutting.

Noxious Chemicals

1. Material Safety Data Sheets (MSDS) are available in lab. In case of a spill, an accident or a safety question, users can find chemical safety information in the MSDS.
2. Notify the lab manager of any spills immediately. Users should wear protective gloves when handling fixatives, decal, or other chemical solutions.

3. Only water is to be poured down the sinks; all chemical solutions should be collected in labeled waste containers and logged on the disposal data sheets.
4. All fixatives (Z-fix, formaldehyde, gluteraldehyde, etc.) must be used only under the hood.

Preserved Specimens

1. Gloves should always be used when handling preserved samples.
2. Samples in any preservative are only to be handled inside the fume hood.
3. Notify the lab manager if there is a spill of preservative.
4. Scraps of the specimen are NOT to be disposed of in the sink.
5. Specimens are to be clearly labeled and stored in designated containers.

Lab Cleanliness, Organization and Appearance

It is important to keep the overall appearance of the lab in an organized and clean condition.

1. The entire lab is to be kept clean at all times within the context and needs of ongoing research.
2. Do not leave unused instrumentation on bench tops in a haphazard manner. Please store all pipettors and boxes/containers not in immediate use in an organized manner.
3. Lab decorations (pictures, stickers) should not in general be placed in the laboratory setting.

9.19 USGS Laboratory

Section 10: Emergency Information

All labs using chemicals are required by FL-OSHA to have a Chemical Hygiene Plan (CHP) in place for chemical workers. It is the responsibility of the lab supervisor/PI to ensure that a complete Chemical Hygiene Plan is developed, implemented and shared with all their affected workers. **As applicable, please provide information regarding emergency procedures and equipment specific to the lab(s) under your supervision. Where applicable you may just reference the emergency contact information on your lab door placards.**

A. Evacuation Procedures

During various emergency situations (fire, explosion, bomb threat, etc.) it will be necessary to evacuate the building. Everyone will be instructed to leave the building through the nearest exit, and get away from the building. Individuals with mobility impairments should be assisted into the nearest stairwell in the building. Immediately notify the police or fire department if a disabled individual is waiting on a stairwell landing and provide them with the location. Public Safety is responsible for sweeping parts of the building to be sure everyone has evacuated and moved away from the building. During evacuation the building is considered closed; Public Safety should be called if/when patrons refuse to leave the building.

B. First-aid Kits

Every laboratory should contain a first aid kit which should contain: sterile gauze , adhesive tape, adhesive bandages in several sizes, elastic bandage, antiseptic wipes, antibiotic cream (triple-antibiotic ointment), acetaminophen or ibuprofen, calamine lotion, alcohol wipes or ethyl alcohol, plastic gloves (at least 2 pairs), and band-aids.

The PI and/or lab manager is responsible for restocking the first aid-kit.

C. Spill Cleanup Materials

Chemical Spill Cleanup Procedures

You should NOT clean up a spill if:

- You don't know what the spilled material is
- You lack the necessary protection or equipment to do the job safely
- The spill is too large to contain
- The spilled material is highly toxic
- You feel any symptoms of exposure

Instead contact NOVALERT: **954-262-8999**.

Call **9-911** if spill is immediately health-threatening.

Spill Response Scheme

1. Evaluate and notify your instructor/principal investigator!
 - Assess the toxicity, flammability, or other properties of material (see label and MSDS).
 - For flammables, remove or turn off all ignition sources such as motors, pumps, fridges.
 - Determine if there is an immediate health threat to you or your neighbors if so, alert neighbors, isolate the area and call for help using the numbers above.
 - If spill is minor, begin cleanup following steps below.
2. Containment/Cleanup
 - Don chemical resistant gloves, eye protection, lab coat, etc.
 - Contain and absorb spill using absorbents appropriate for the material.
 - Protect floor drains from contamination, by putting absorbents or barriers around them.
 - Package and label waste. Include contaminated clothes, rags, equipment, etc.
 - Store temporarily in a fume hood if material is volatile.
3. Follow-up
 - Send Hazardous Materials/Waste Pickup Request to Supervisor.
 - Reorder and restock cleanup materials used.
 - Inform NOVALERT if there were any personnel exposures, or release to the drain system.

D. Laboratory Monitors or Alarms

Alarms are maintained by NSU Public Safety.

E. Fighting Small Fires Safely

In the event of a small fire:

1. Call the fire department (9-911) even if the fire is extinguished.
2. Feel closed doors— if it is hot, leave the door closed. Put towel or shirt in crack to confine smoke. If the door is cool, open it a crack to see if the fire is confined and small enough to fight safely.
3. Select the right type of extinguisher for the specific type of fire.

Labs are equipped with one, or both, of two types of extinguishers: **carbon dioxide and dry powder**. Carbon dioxide extinguishers are distinguished by their flared hoses, versus dry chemical ones which have a straight hose. Also, dry powder extinguishers have a pressure gauge— carbon dioxide extinguishers do not.

All fires and uses of fire extinguishers **must** be promptly reported to 9-911, even if the fire is out. Note, once activated, an extinguisher will slowly leak away its propellant, thus rendering the extinguisher useless. Call to have it properly recharged.

- **Class A:** Ordinary combustibles, such as wood, paper, cloth, rubber, and many plastics.
Proper Extinguishers:
 - Dry chemical
 - Pressurized Water (corridor)
- **Class B:** Flammable or combustible liquids or gases.
Proper Extinguishers:
 - Dry chemical
 - Carbon dioxide
- **Class C:** Energized electrical equipment. Cut the power source. Do not use water on such fires unless the equipment has been unplugged.
Proper Extinguishers:
 - Dry chemical
 - Carbon dioxide
- **Class D** Combustible metals. Do not attempt to extinguish with ordinary fire extinguishers.
Proper Extinguishers:
 - Special Class D extinguisher (generally yellow and labeled "For Metal Fires Only". If these are unavailable attempt to smother the fire with dry sand).

Procedure for using Fire Extinguishers:

1. Always stay between the fire and your exit when using extinguishing equipment.
2. Never turn your back on the fire - step backwards. If possible, have someone watch your back.
3. Aim the extinguisher or fire hose at the base of the fire, sweeping across the fire in a side to side motion. Start 8-10 feet back from fire.

NSU OCEANOGRAPHIC CENTER LABORATORY SAFETY PLAN

4. Continue to spray even after the fire is out to soak the burning material.
5. Stay as low as possible, out of the heat and smoke.
6. In case clothing catches fire, the best thing to do is to stop, drop to the ground and roll.
7. Have extinguisher recharged after use

F. Other

Per campus policy, all significant **injuries must be documented** via an Incident Report to NOVALERT (954-262-8999) as soon as possible. This is necessary for potential reimbursement for personal medical costs, or Worker's Compensation Claims.

NOVALERT (954) 262-8999

Medical Help

Call 9-911 and give Emergency Personnel:

1. Your EXACT location - what building, floor, etc
2. The type of injury (bleeding, fracture, etc.)
3. Your name
4. Stay on the line

Police or fire personnel will request that you wait. Help will be sent, and then you will be asked for additional information.

If Rendering Help to the Injured

1. Do not move the victim (unless in a dangerous area).
 2. Restore breathing and/or heartbeat - (CPR if trained).
 3. Keep others away from the victim.
 4. Stop the bleeding.
 5. Know your own limitations on type of aid to render
- DO NOT OVERREACT!**

In the Event of a Fire

Pull the nearest fire alarm, call 9-911 for the fire department and give them your location and the following information;

1. The exact location of the fire
2. Type of fire - trash can, smoke, flames, etc.
3. Your name

Take residents, class, team, etc. away from the building within a safe secure distance and keep them together! **BE SURE ALL ARE ACCOUNTED FOR!**

Per Broward County Fire and campus policy, **all fires must be reported to 9-911 immediately** – even if the fire is out. This is particularly true if there is use of an extinguisher (must be replaced); an injury; or property damage.

When a Police Officer is Needed

1. Phone 9-911 (if emergency)
2. Give police -

- The exact location
 - Type of problem (disturbance, vandalism, etc.)
 - Your name
3. Keep other persons away from the scene
 4. DO NOT touch or disturb anything
 5. If possible get a description of suspect, vehicle, etc.
 6. Attempt to keep others safe and calm
 7. Call NSU Public Safety

Section 11: Laboratory Self-Inspection Checklist

Under Florida law (OSHA), supervisors (PIs) are required to include procedures for identifying and evaluating work place hazards including scheduled periodic inspections to identify unsafe conditions and work practices. Also, both Broward County Fire and the Florida State Fire Marshal expect that labs do regular inspections and corrections of safety problems. Accordingly, lab supervisors (PIs) and departments are responsible for performing regular safety inspections using the checklist below, or equivalent. EH&S will audit the department's program on an annual basis with its own lab visit. This is not a list of every possible hazard, but can be utilized as a guide to conduct your own safety surveys. The items listed are based on applicable regulations, codes or campus policy.

A. Laboratory Equipment Minimal Self-Inspection Checklist

1. Are the eyewash and emergency shower stations tested quarterly by Facilities and free of any obstructions which would prevent ready access? Labs should run their eye wash units monthly to assure that the water lines are kept clean.
2. Have fume hoods been tested within the year (check label)?
 - Is **air flow indicator** present and operational?
 - Is lab **equipment or chemicals** placed within the hood minimized? **Keep only items in use.**
 - Are air entry slots at back of hood kept clear of obstructions? Cluttered hoods interfere with proper air flow.
 - Is the front sash at the appropriate level "**red arrow mark**" when hood is in use?
 - If the low flow alarm engages, lower the sash until the alarm stops. If the alarm continues when the sash is lowered to the "**red arrow mark**" please contact public safety. **DO NOT** over-ride the safety alarm by permanently engaging the "Mute" or "Emergency" button (e.g., with tape, paper clips, etc.).
 - If the low flow alarm engages, lower the sash until the alarm stops. If the alarm continues when the sash is lowered to the "**red arrow mark**" please contact public safety. **DO NOT** over-ride the safety alarm by permanently engaging the "Mute" or "Emergency" button (e.g., with tape, paper clips, etc.).
3. Are biological safety cabinets certified annually or when moved (check sticker) and are they the proper types for the work being conducted?
4. Do labs using non-ionizing radiation equipment, such as lasers, microwaves, and ultraviolet light sources, have properly posted warning signs and shielded work areas?
5. Compressed gas cylinders.
 - Are cylinders dated upon arrival and contents clearly identified?

NSU OCEANOGRAPHIC CENTER LABORATORY SAFETY PLAN

- Inspect regularly for defects, i.e., excessive rust, dents, bulging, corrosion, etc.
 - Unidentified cylinders should be marked, "CONTENTS UNKNOWN" and returned to the manufacturer.
 - Non-lecture bottles more than 5 years old must be returned to the manufacturer to ensure they are safety/pressure tested as required by law ("hydrostatic testing") Check stamped date on cylinder when it was last tested
 - Corrosive gases (e.g. HF, HBr, HCl, H₂S) can degrade the cylinder over time and/or produce dangerously high pressures of hydrogen. Dispose of within 2 years.
 - Are cylinders secured upright with welded chains and brackets bolted to a wall, bench or other secure object (no C-clamps)?
 - Are protective caps in place while cylinders are not in use?
 - Use of large cylinders of highly toxic gases must be reviewed/approved
6. Flammable gas (e.g. hydrogen, methane) tubing should be equipped with a flash arrestor to prevent flame flashback to cylinder (available from gas vendors).
 7. Gas cabinets with toxic or flammable gas delivery manifolds often have an excessive flow detection and auto-shutoff valve built-in. Verify that this safety feature is functional.
 - Are toxic gases being used with the required controls?
 8. Highly toxic gas cylinders should be equipped with a reduced flow orifice (RFO) connection to prevent rapid discharge of cylinder contents (available from gas vendors).
 9. Are refrigerators for storing flammables posted with signage indicating they are safe for such storage? (e.g. "desparked", "lab-safe", "explosion-proof", "flammable storage").
 - Are refrigerators that are NOT designed for flammables storage clearly marked as such? (this is very important to prevent a potential explosion)
 - Are all chemical storage refrigerators marked with "No Food" labels?
 - Refrigerators in labs utilized for food or drinks should be marked "Food Only/No Chemicals?"
 10. Is the location of manuals and/or instructions for each piece of equipment known?
 11. Are the belt guards in place on all pumps, etc?

B. Flow and Pressure Controls Minimal Self-Inspection Checklist

Cooling Water Systems

For hot processes that demand a constant flow of cooling water, particularly those that are left unattended, (e.g. solvent stills) it is important to have a flow monitoring device in place. These devices are programmed to shut-off electrical power when the cooling water flow is insufficient. These are commercially-available.

Pressurized Systems

Inspect and test all high pressure vessels regularly per the owners manual requirements. Each vessel should have a use-log of: experiment conditions, dates of runs, testing/maintenance history, etc. in order to track the vessel's life-expectancy. Pressure vessels must include a functional over-pressurization rupture disk to prevent a catastrophic vessel failure.

C. Seismic Safety Minimal Self-Inspection Checklist

1. Do shelves used for chemical storage have seismic restraining devices (e.g. lip, wire or bungee cord) installed to prevent chemicals from falling? Is all valuable or hazardous equipment seismically anchored?

2. Are cabinets, chemical shelves and furniture over 42 inches in height braced against walls to prevent their falling over in the event of an earthquake?
3. Is overhead storage of heavy objects minimized and restrained?

D. Electrical Safety Minimal Self-Inspection Checklist

1. Are employees instructed not to use extension cords in place of permanent wiring?
2. Are extension cords prevented from running through walls, ceiling or doors?
3. Are extension cords, multiple outlet strips, or cubes plugged directly into a wall outlet?
4. Are extension cords 12' or less in length, 14-gauge (heavy duty) at a minimum, and servicing only one appliance or fixture?
5. Are cord guards provided across an aisle or other passageway to prevent tripping?
6. Is electrical equipment inspected for frayed cords and damaged connections?
7. Is all electrical equipment grounded (three-prong plugs) or double insulated?
8. Are 3-prong plugs only used for 3-prong receptacles, and never altered to fit into an outlet?
9. Are electrical boxes, panels and receptacles covered to prevent electrocution or shock?
10. Is the multiple outlet strip cord 6' or less, and does the strip have a circuit breaker?
11. Are control switches, circuit breakers and electrical panels free of obstructions?
12. Are high voltage control panels and access doors posted?
13. Are Ground Fault Circuit Interrupters in place where electrical outlets are in use within 6 feet of water?

E. Hazardous Materials Minimal Self-Inspection Checklist

1. Is your lab's legally-required (FL-OSHA) Lab-specific Chemical Hygiene Plan (CHP) completed and shared with all workers? Does your CHP address use of Particularly Hazardous Substances (human carcinogens, acute toxins, reproductive toxins)?
2. Are Cal-OSHA regulated carcinogens such as formaldehyde/formalin, dichloromethane and benzene always used in a fume hood and with appropriate gloves/eyewear?
3. Are chemical containers properly labeled with chemical name and hazard of the material? (e.g., repackaged materials and lab-synthesized materials)
4. Are stored chemicals segregated according to hazard classification/compatibility (acids, bases, flammables, oxidizers, water reactives, etc.)? Chemical Storage
5. Are all containers of peroxide-forming chemicals (e.g., ethers) dated upon receipt and disposed of within the prescribed time period? Peroxides can be explosively unstable.
6. Are flammable liquids stored in closed metal safety cans or flammable storage cabinets whenever possible?
7. Are flammable liquids always stored in flammable cabinets when in excess of 10 gallons?
8. Do you have large volumes of flammable solvents (e.g., multiple cases or drums) in storage that are above what is reasonably needed? The quantities of flammables that can legally be stored are regulated by FL Fire Code. Please don't stockpile large quantities of these materials.
9. Are flammable liquids stored away from sources of heat, ignition, electrical equipment or sources of static electricity?
10. *Static Electricity* - Electrically ground all containers/equipment involved in pumping flammable liquids to prevent buildup of static electricity as an ignition source.

11. Are solvent stills clearly labeled with the solvent name and drying reagent?
12. Are acid volumes greater than 10 gal. stored in an approved storage cabinet?
13. Is there a catch pan beneath manometers, barometers, etc. which contain mercury?
14. It is highly recommended chemical spill cleanup materials be available. Are all lab workers familiar with the location of spill cleanup kits?

F. Hazardous Waste Minimal Self-Inspection Checklist

1. Are personnel generating chemical waste trained?
2. Is the illegal disposal of hazardous substances down the drain prevented?
3. Is there a supply of NSU waste labels handy (available in all campus storerooms)?
4. Are all hazardous waste containers labeled with the official NSU Hazardous Waste label?
5. Are Hazardous labels going on containers when the **first drop** of waste goes into the container?
6. Are all constituents in mixtures identified, as well as their concentrations? **Do not** use generic names like "**Waste or Organic waste**" use proper chemical name(s).
7. Is there a designated area for storage of hazardous waste and labeled as such?
8. Are chemically incompatible wastes segregated?
9. Is liquid waste stored in screwtop containers?
10. Are lab personnel instructed not to dispose of chemicals by fume hood evaporation? Ensure caps remain on containers when not in use.
11. Are chemical wastes disposed of within 9 months of their accumulation, **regardless how much material is left inside the container?**
12. Are all "sharps" (syringes, razor blades, etc.) disposed in puncture resistant, leak-resistant containers and sealed tightly to preclude loss of contents? Dispose containers before they become full.
13. Is there a designated glass disposal container in the lab?
14. Is infectious waste decontaminated before disposal?

G. General Safety Concerns Minimal Self-Inspection Checklist

1. Is an emergency information sign posted outside the lab, indicating the hazards within, responsible persons and phone numbers?
2. Has an emergency information sign with phone numbers for fire, police, medical, EH&S, etc. been posted?
3. Is the level of housekeeping in the lab satisfactory?
 - No hazardous materials stored on floor
 - Aisles and corridors kept clear
 - Lack of clutter
4. Are rooms containing regulated hazardous substances, such as infectious and radioactive materials, posted with warning/caution signs and appropriate authorizations?
5. Are aisles free of obstructions in case of emergency? Minimum clearance for laboratory aisles is 2 ft.
6. Do work areas have adequate ventilation and illumination? To prevent suffocation, verify that fresh air is supplied to cold/hot rooms that are used as work areas. Check emergency door release and alarm mechanisms.

NSU OCEANOGRAPHIC CENTER LABORATORY SAFETY PLAN

7. Are fire extinguishers functional? (plastic seal and metal pin intact and dry powder units show pressure. Are the extinguishers located on their wall hooks? Is the area in front of the extinguishers accessible?)
8. Are food and beverages kept out of chemical work areas and out of laboratory refrigerators?
9. Is the appropriate personal protective equipment required for the lab available, in good condition and used?
10. Have all respirator users been certified?
11. Lab doors are fire-rated and therefore cannot be propped open with a wedge or other device. Discontinue use of these, or Broward County Fire may confiscate them and cite the University.
12. Secure your highly hazardous materials, e.g. highly toxic gas, radiation, select biological agents. Ensure the lab door(s), freezers, refrigerators, storage cabinets, etc. with these materials are locked whenever the lab is left unattended.
13. Administrative: (Note: these requirements must be met by supervisors to satisfy their personal regulatory obligations and reduce their liability)
 - All lab workers are required to read the NSU Chemical Hygiene Plan to satisfy numerous regulatory training requirements. Verify everyone has read the CHP and has signed the consent form.
 - Are safety training records generated from the class (Lab Safety Training Checklist) maintained and available for review by employees, EH&S and outside agencies?
14. Are all employees aware of:
 - How to access Material Safety Data Sheets (MSDSs)?
 - The Emergency Assembly Point for your building?
 - The location of the nearest fire alarm pull station?
 - The three basic types of fire extinguishers and their applicability?
 - The location/availability of first aid kits within the building?
 - The location/purpose of your building's *Safety Corner* bulletin board?
 - The identity of your *Department Safety Rep* ?
 - The availability/purpose of the *NSU Hazard Reporting Form*?

APPENDIX A

QUICK REFERENCE FOR SPILL CLEAN-UP

Procedure:

1	Locate the appropriate spill clean-up kit.																								
2	Look to see if the kit has the correct contents and add any missing items: <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Chemical</th> <th style="text-align: left;">Mercury</th> <th style="text-align: left;">Biological</th> </tr> </thead> <tbody> <tr> <td>Control pillow</td> <td>Suction pump</td> <td>Forceps</td> </tr> <tr> <td>Absorbents – vermiculite</td> <td>Zinc powder</td> <td>Paper towels</td> </tr> <tr> <td>Neutralizing agent</td> <td>Sulfuric acid</td> <td>Biohazardous bags</td> </tr> <tr> <td>Plastic scoops</td> <td>Waste bags</td> <td>Bleach</td> </tr> <tr> <td>Waste bags</td> <td>Absorbent sponge</td> <td></td> </tr> <tr> <td>5 gallon container</td> <td>Plastic vial</td> <td></td> </tr> <tr> <td>Signs and barricade tape</td> <td></td> <td></td> </tr> </tbody> </table>	Chemical	Mercury	Biological	Control pillow	Suction pump	Forceps	Absorbents – vermiculite	Zinc powder	Paper towels	Neutralizing agent	Sulfuric acid	Biohazardous bags	Plastic scoops	Waste bags	Bleach	Waste bags	Absorbent sponge		5 gallon container	Plastic vial		Signs and barricade tape		
Chemical	Mercury	Biological																							
Control pillow	Suction pump	Forceps																							
Absorbents – vermiculite	Zinc powder	Paper towels																							
Neutralizing agent	Sulfuric acid	Biohazardous bags																							
Plastic scoops	Waste bags	Bleach																							
Waste bags	Absorbent sponge																								
5 gallon container	Plastic vial																								
Signs and barricade tape																									
3	Materials required for working with the different kinds of spills: <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;"><u>Type of Spill</u></th> <th style="text-align: left;"><u>Neutralizing Agent / Clean up supplies</u></th> </tr> </thead> <tbody> <tr> <td>Acid</td> <td>Sodium bicarbonate</td> </tr> <tr> <td>Bases</td> <td>Citric Acid</td> </tr> <tr> <td>Organic Solvents</td> <td>Absorbent pads, charcoal if available</td> </tr> <tr> <td>Mercury</td> <td>Amalgam sponges or zinc powder</td> </tr> <tr> <td>Metals e.g., sodium</td> <td>Sand, Class D fire extinguishers</td> </tr> <tr> <td>Biological</td> <td>Bleach</td> </tr> </tbody> </table>	<u>Type of Spill</u>	<u>Neutralizing Agent / Clean up supplies</u>	Acid	Sodium bicarbonate	Bases	Citric Acid	Organic Solvents	Absorbent pads, charcoal if available	Mercury	Amalgam sponges or zinc powder	Metals e.g., sodium	Sand, Class D fire extinguishers	Biological	Bleach										
<u>Type of Spill</u>	<u>Neutralizing Agent / Clean up supplies</u>																								
Acid	Sodium bicarbonate																								
Bases	Citric Acid																								
Organic Solvents	Absorbent pads, charcoal if available																								
Mercury	Amalgam sponges or zinc powder																								
Metals e.g., sodium	Sand, Class D fire extinguishers																								
Biological	Bleach																								
4	Wear the correct personal protective equipment – gloves (nitrile or rubber), gown (chemical resistant), protective eyewear and a mask.																								
5	If the spill is in a common area, seal off the area with barricade tape or warning signs.																								
6	If splashing is anticipated, protect the face with a face shield or mask.																								
7	Depending on the type of spill; for chemicals neutralize and absorb with vermiculite, mercury requires suction and biological spills need the spill to be decontaminated.																								
8	For biological spills wait 20 minutes before proceeding.																								
9	Dispose of all contaminated materials in the correct waste bags.																								
10	Chemical and mercury require an additional step. Chemical have to be absorbed after being neutralized and mercury requires sulfuric acid.																								
11	Disposal of all materials either in waste or biological bags.																								
12	Chemical and biological spills should be washed with water after the spill is removed, while the mercury spill requires that the dried sulfuric acid be swept up.																								
13	Dispose of all personal protective equipment in the correct waste containers.																								
14	Wash hands thoroughly.																								

APPENDIX B

INCIDENT REPORT FORM

Employee Data (to be completed by employee)

Case No:

Name _____

Telephone _____

Address _____

Occupation _____

Department _____

Location _____

Incident Data (to be completed by employee)

Date of injury _____

Time of injury _____

Where did the injury or illness occur? _____

Describe the object or substance that directly caused the injury _____

How did the injury or illness occur? _____

Describe your injury or illness _____

Who was the accident reported to? _____

Date Reported _____ Time Reported _____

Did the injury occur on the employer's premises? _____

Witness' Name & Address _____

I CERTIFY THAT THE INCIDENT DATA I PROVIDED ABOVE IS TRUE AND THAT MY INJURY RESULTED ENTIRELY AT NOVA SOUTHEASTERN UNIVERSITY.

Employee Signature _____ Date _____ Time _____

Supervisor / Safety Officer's Statement

Did the injured employee receive medical attention? _____ Date _____

Name & address of doctor or hospital where treatment was received _____

Who investigated the accident? _____ Title _____

Comments _____

Signature _____ Date _____ Time _____

